



EN Start Here

Marnings must be followed carefully to avoid body injury.

Transfer Parameter(for reference)

Mug	Aluminum bottle	Small glass	Big glass
300\$	2005	3305	300S
300 °C	300 °C	300℃	300℃

Main parameters

Product Name	Double-Station Mug Printing Machine	Rated voltage	220V~230V	110V~120V
Item No.	P6200	Rated frequency	50Hz 50-60Hz	
Highest temperature	300℃ 572°F	Rated power	120	ow
Longest time	999S	Length of the cable	1.5	M
Packing size	450*405*310mm			











Accessories installation diagram

Please perform all operations after power off



STEPS TO TAKE COVER



- 1. Take out the screws on the cover.
- 2. Remove the plastic cover.
- 3. Secure the patch with screws.

Side Mug







1.Set time temperature.

- 2. Transfer the picture to the cup.
- 3. After the temperature is reached, put the cup into the baking machine and compact it.

Main spare parts

- 1. Power switch
- 2. Thermal insurance
- 3. Socket
- 4. Shell
- 5. Handle
- 6. Buckle
- 7. Cup stop
- 8. Cup holder
- 9. Fever
- 10. Control Panel
- 11. Dock
- 12. Bezel



Guarantee

The products are strictly based on the Consumer Protection Law of the People's Republic of China and the Product Quality Law of the People's Republic of China. The services are as follows:

Within 12 months, this product has the performance failure listed in the "Product Performance Failure Table". It is confirmed by SUNMETA and can be used for maintenance service free of charge. If out of validity, damage caused by force majeure, or human causes, the machine is not covered by the warranty, repair in charge.

Safety instruction: Before operating this unit, please read these instructions completely and save them

Notice

- ▲ Keep unplug when moving the machine
- ${f \Delta}$ Keep unplug when installing accessories
- ▲ Place on a flat and stable platform and operate under ventilated conditions
- ▲ Wear special protective equipment when operating the machine

Warning Improper use may result in electric shock, fire, personal injury and other damage.

- ◎ Do not use this machine in a hazardous location
- \odot Do not use when the machine is not working properly.
- $\,\otimes\,\,$ Do not allow children or adults who do not understand this manual to operate this machine
- \bigcirc Do not disassemble and repair this machine.
- \odot Do not use an unsuitable AC outlet.
- \odot Do not touch the heating plate when the machine heating.

warranty content **Product Performance Failure Table**

Machine body	Parts of the machine itself (excluding main parts)	One year	Fault 1	The machine cannot be used normally according to the operating procedure
	Ceramic heating plate	One year	Fault 2	Heating plate not heating
Main parts	PCBA(circuit board)	One year	Fault 3	Display error
Main parts	Silicone Mug Clip	Free consumables, no warranty.		





