
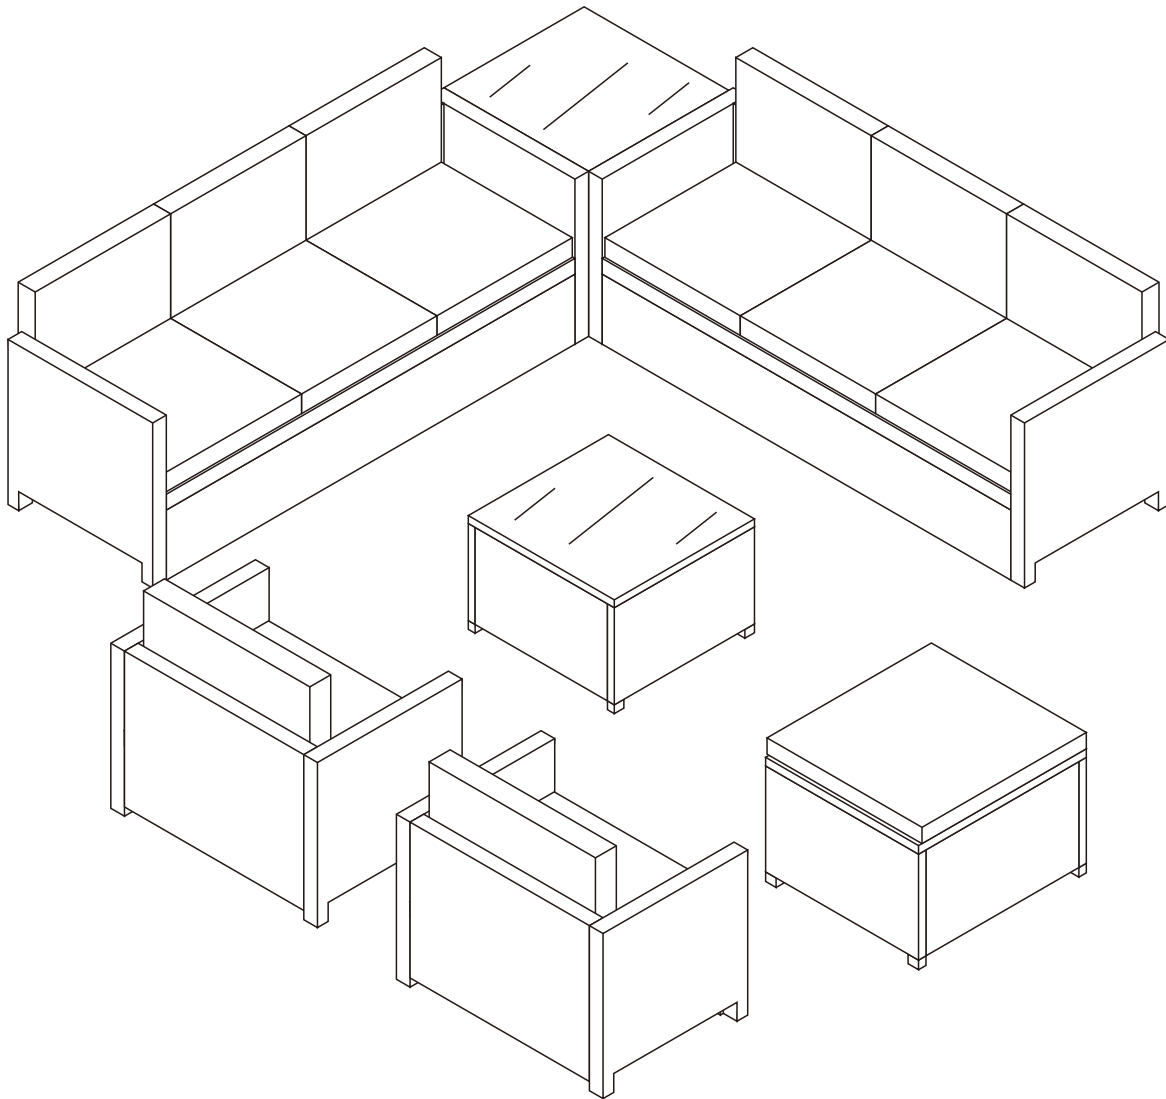
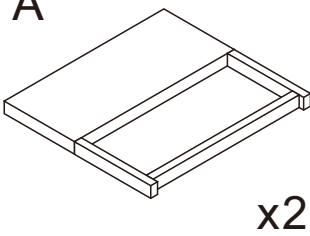
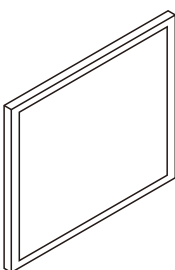
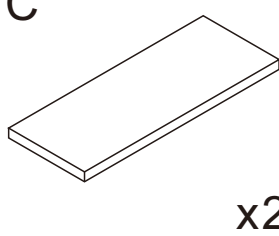
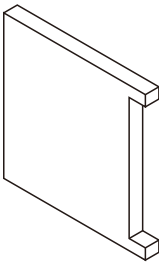
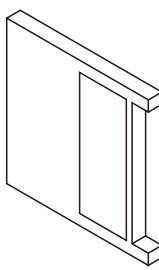
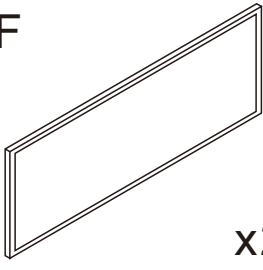
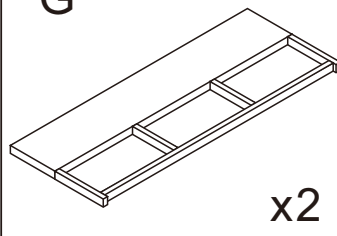
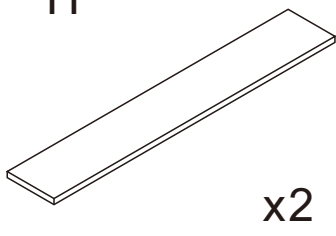
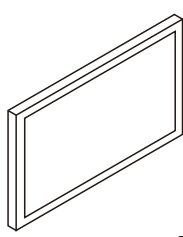
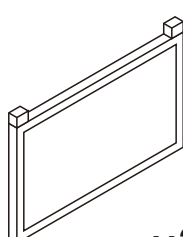
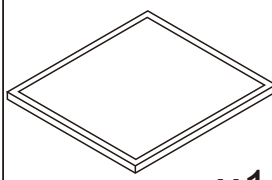
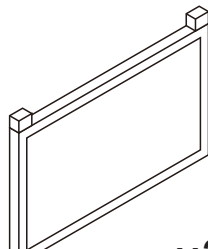
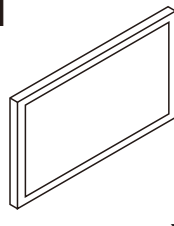
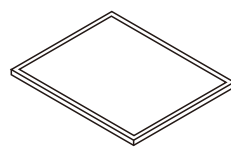
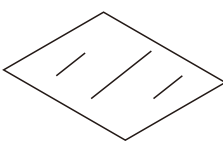
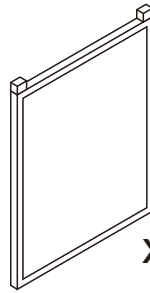
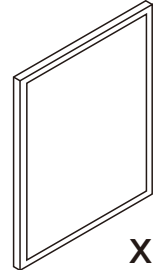
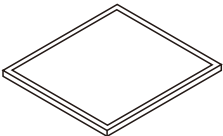
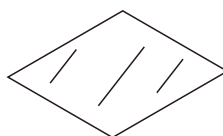
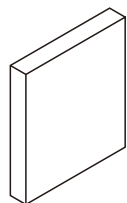
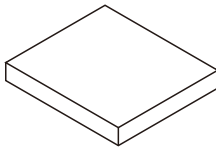



Assembly Instructions

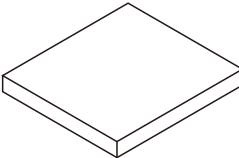

A  x2	B  x2	C  x2	D  x4	
E  x4	F  x2	G  x2	H  x2	
I  x2	J  x2	K  x1	L  x2	M  x2
N  x1	O  x1	P  x2	Q  x2	R  x1
S  x1	T  x8	U  x8	V  x1	
1  M6x35mm x68	2  M6x30mm x24	3  x1	4  x92	

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS


01

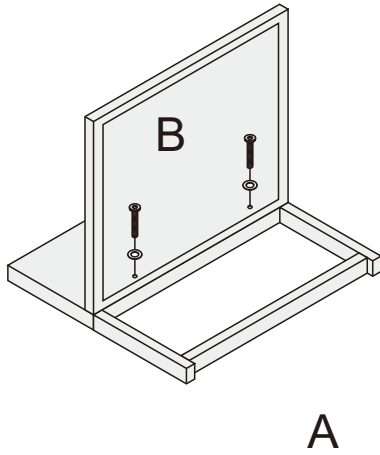

x2

1*2


02

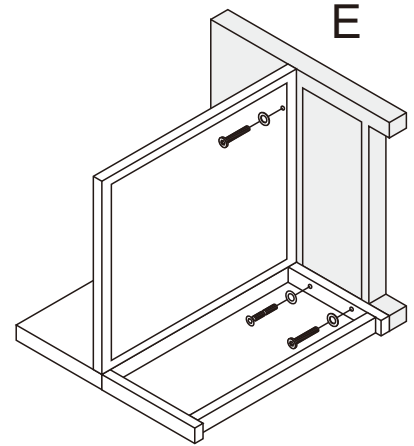

x2

1*3


03

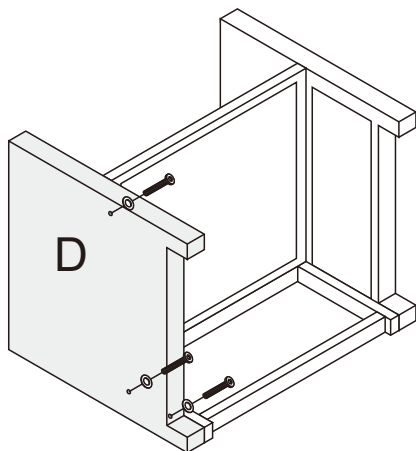

x2

1*3

04

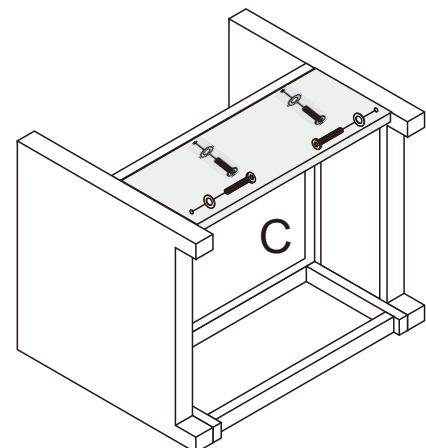


x2

1*4

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS


05

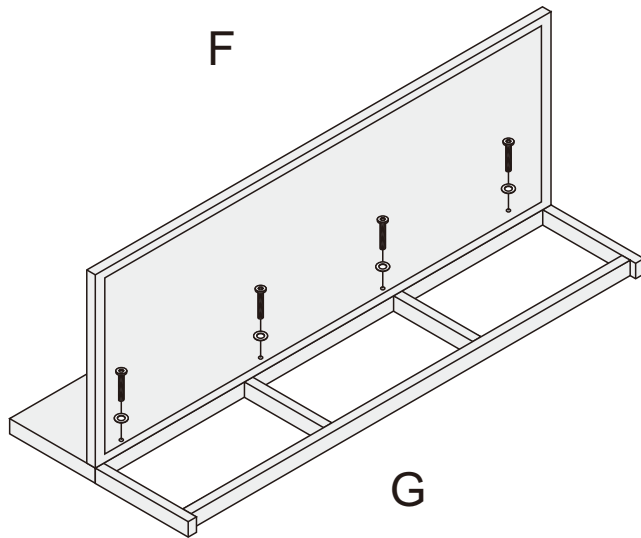

x2

1*4


06

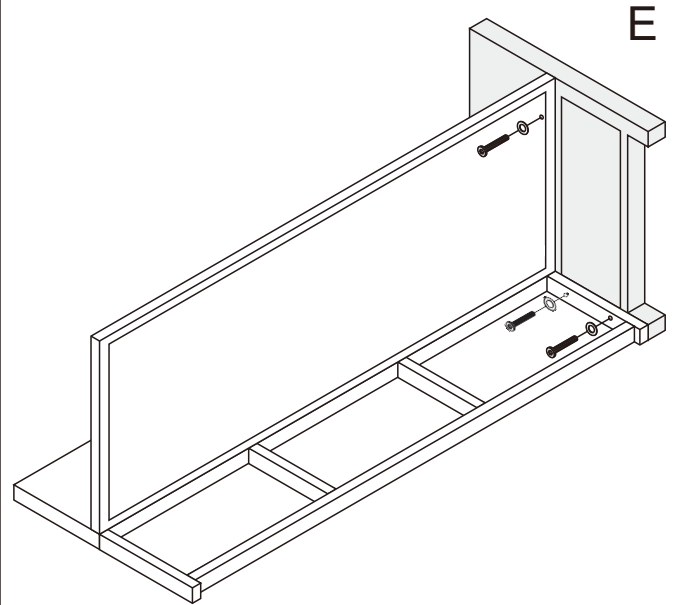

x2

1*3


07

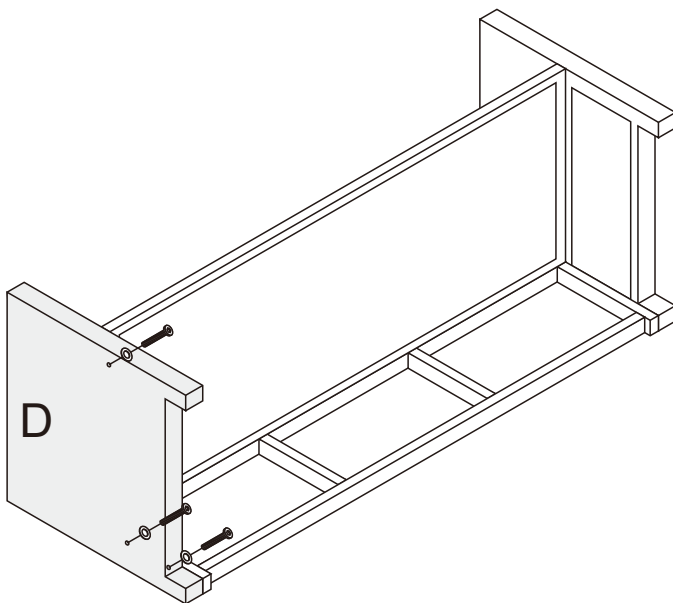

x2

1*3

08

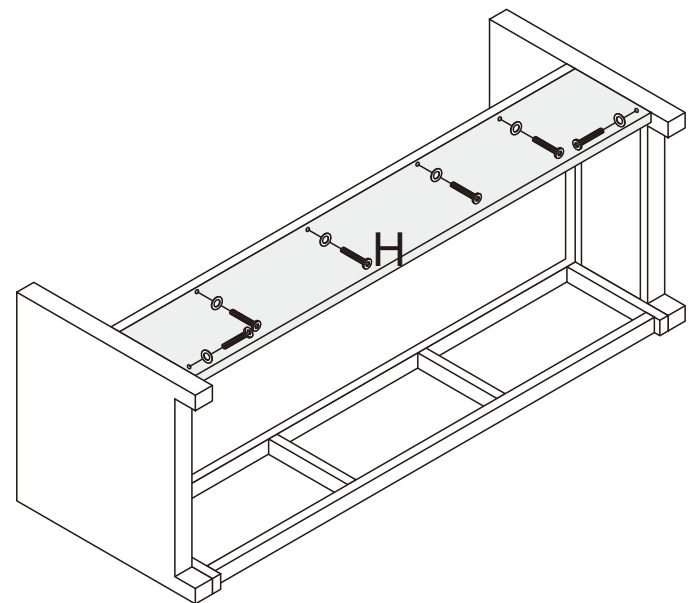


x2

1*6


NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

09

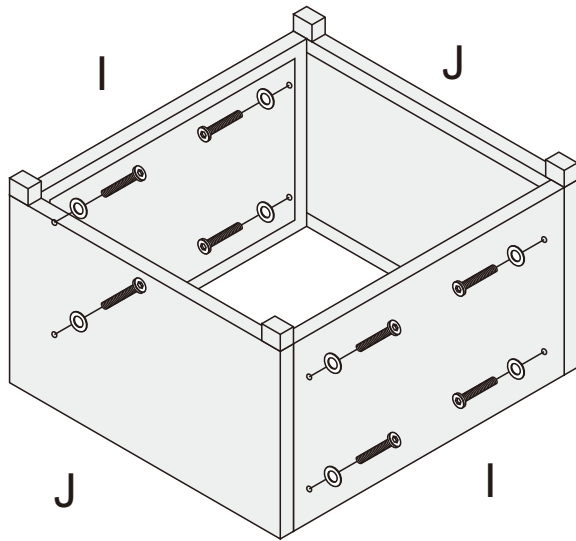


2*8

10

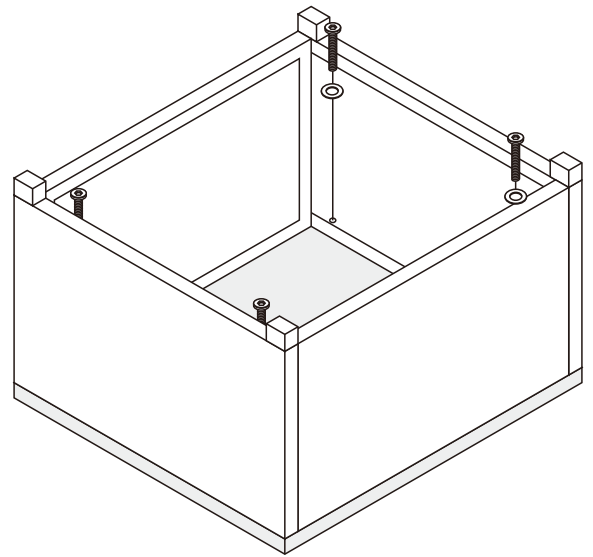


2*4

11

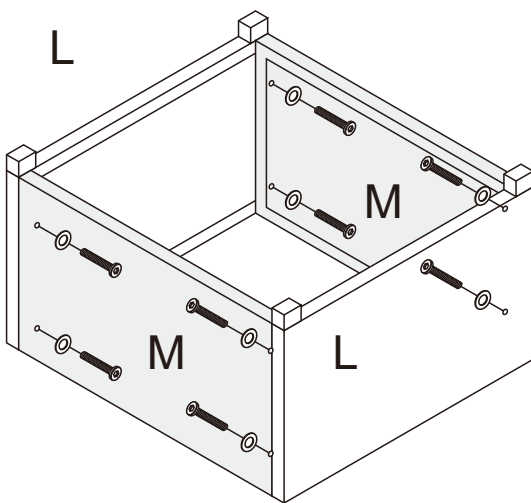

1*8


12

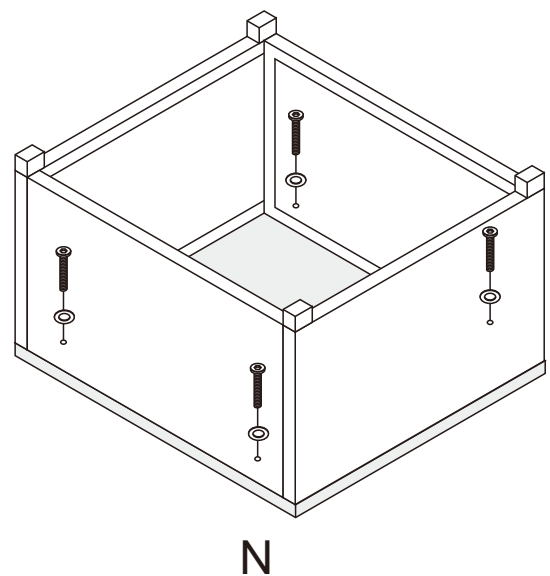


1*4

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

13

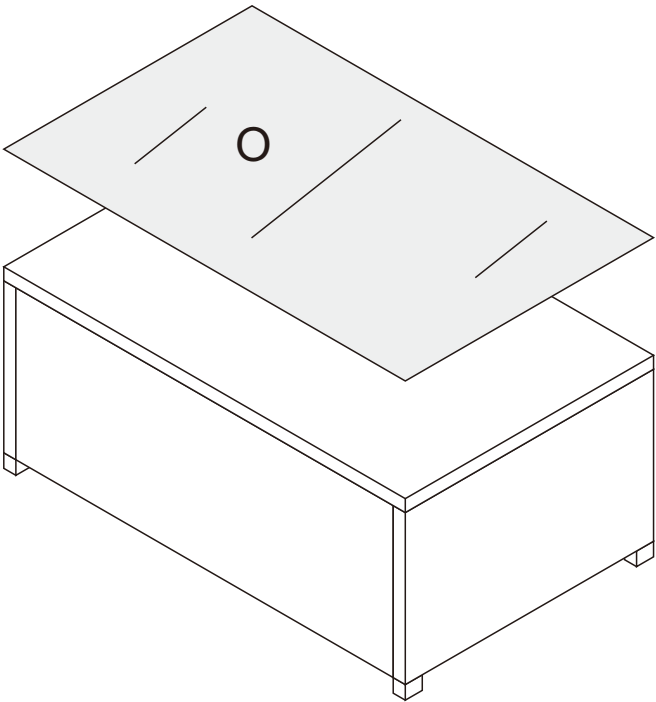


14

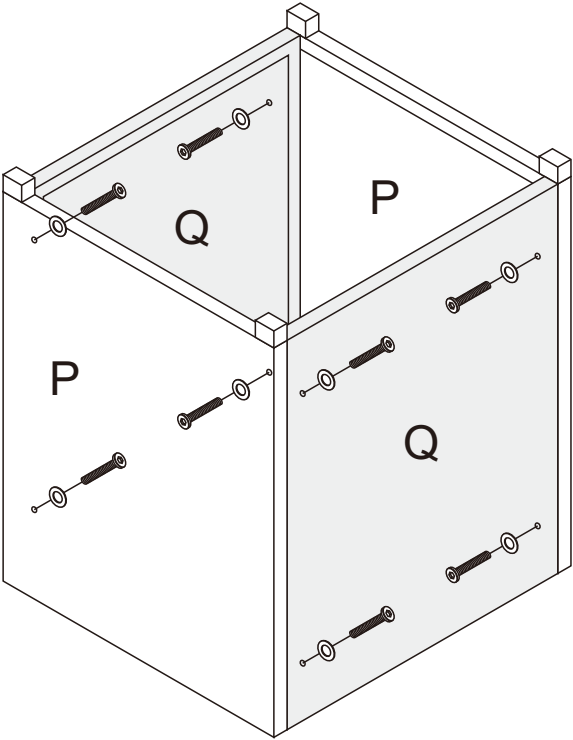


2*8

15

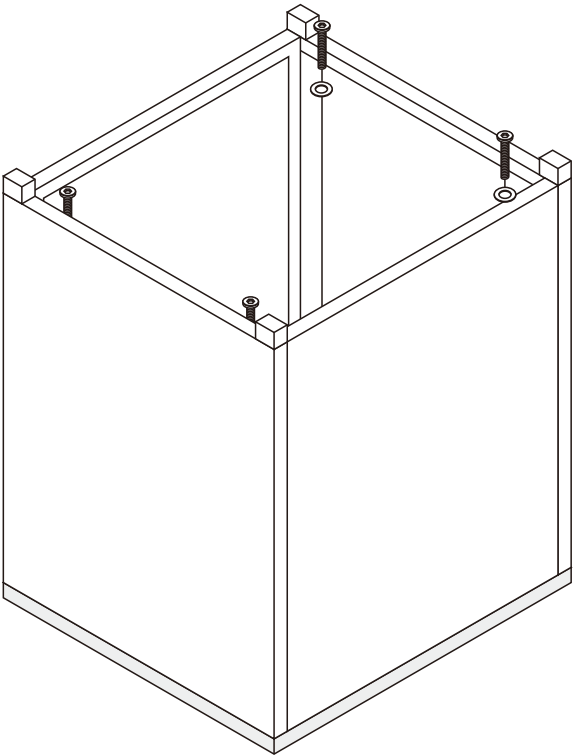


2*4

16

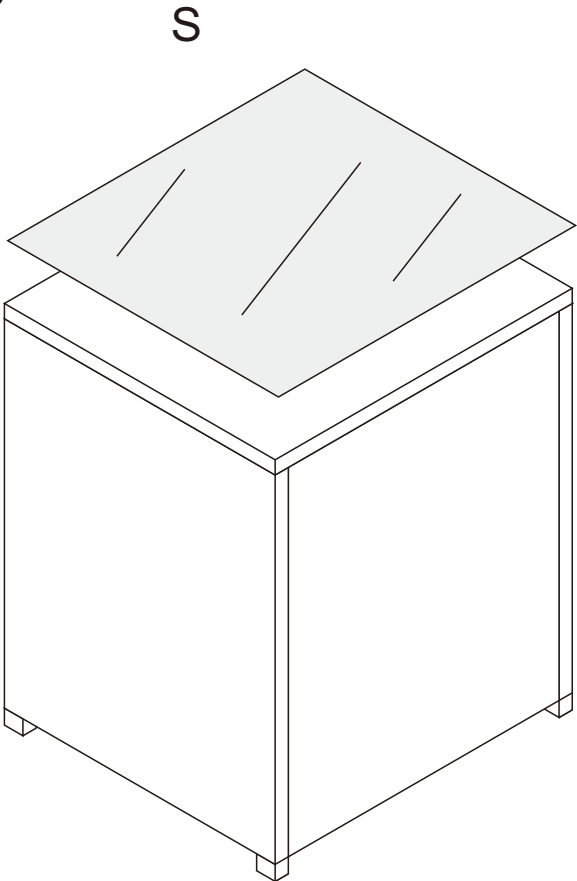

NOTE:50% TIGHTEN BEFORE FIXING ALL BOLTS

17

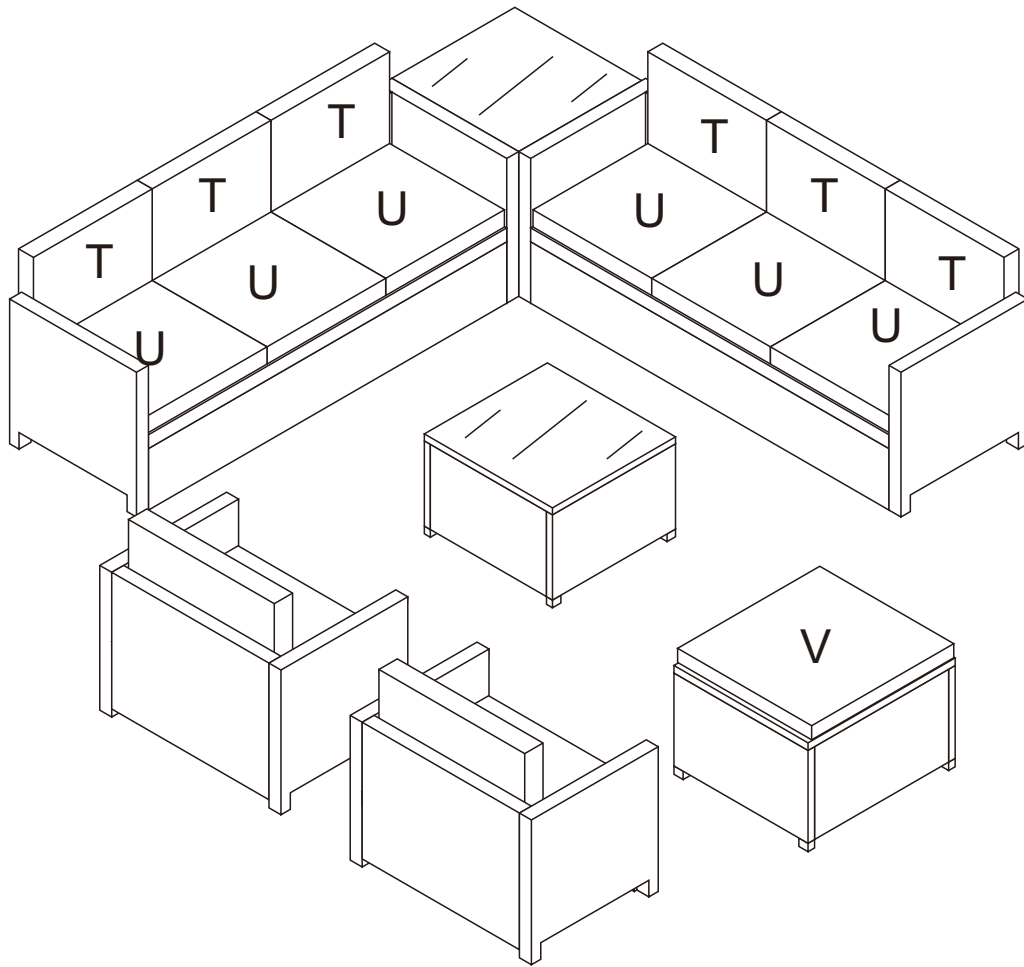

18

