

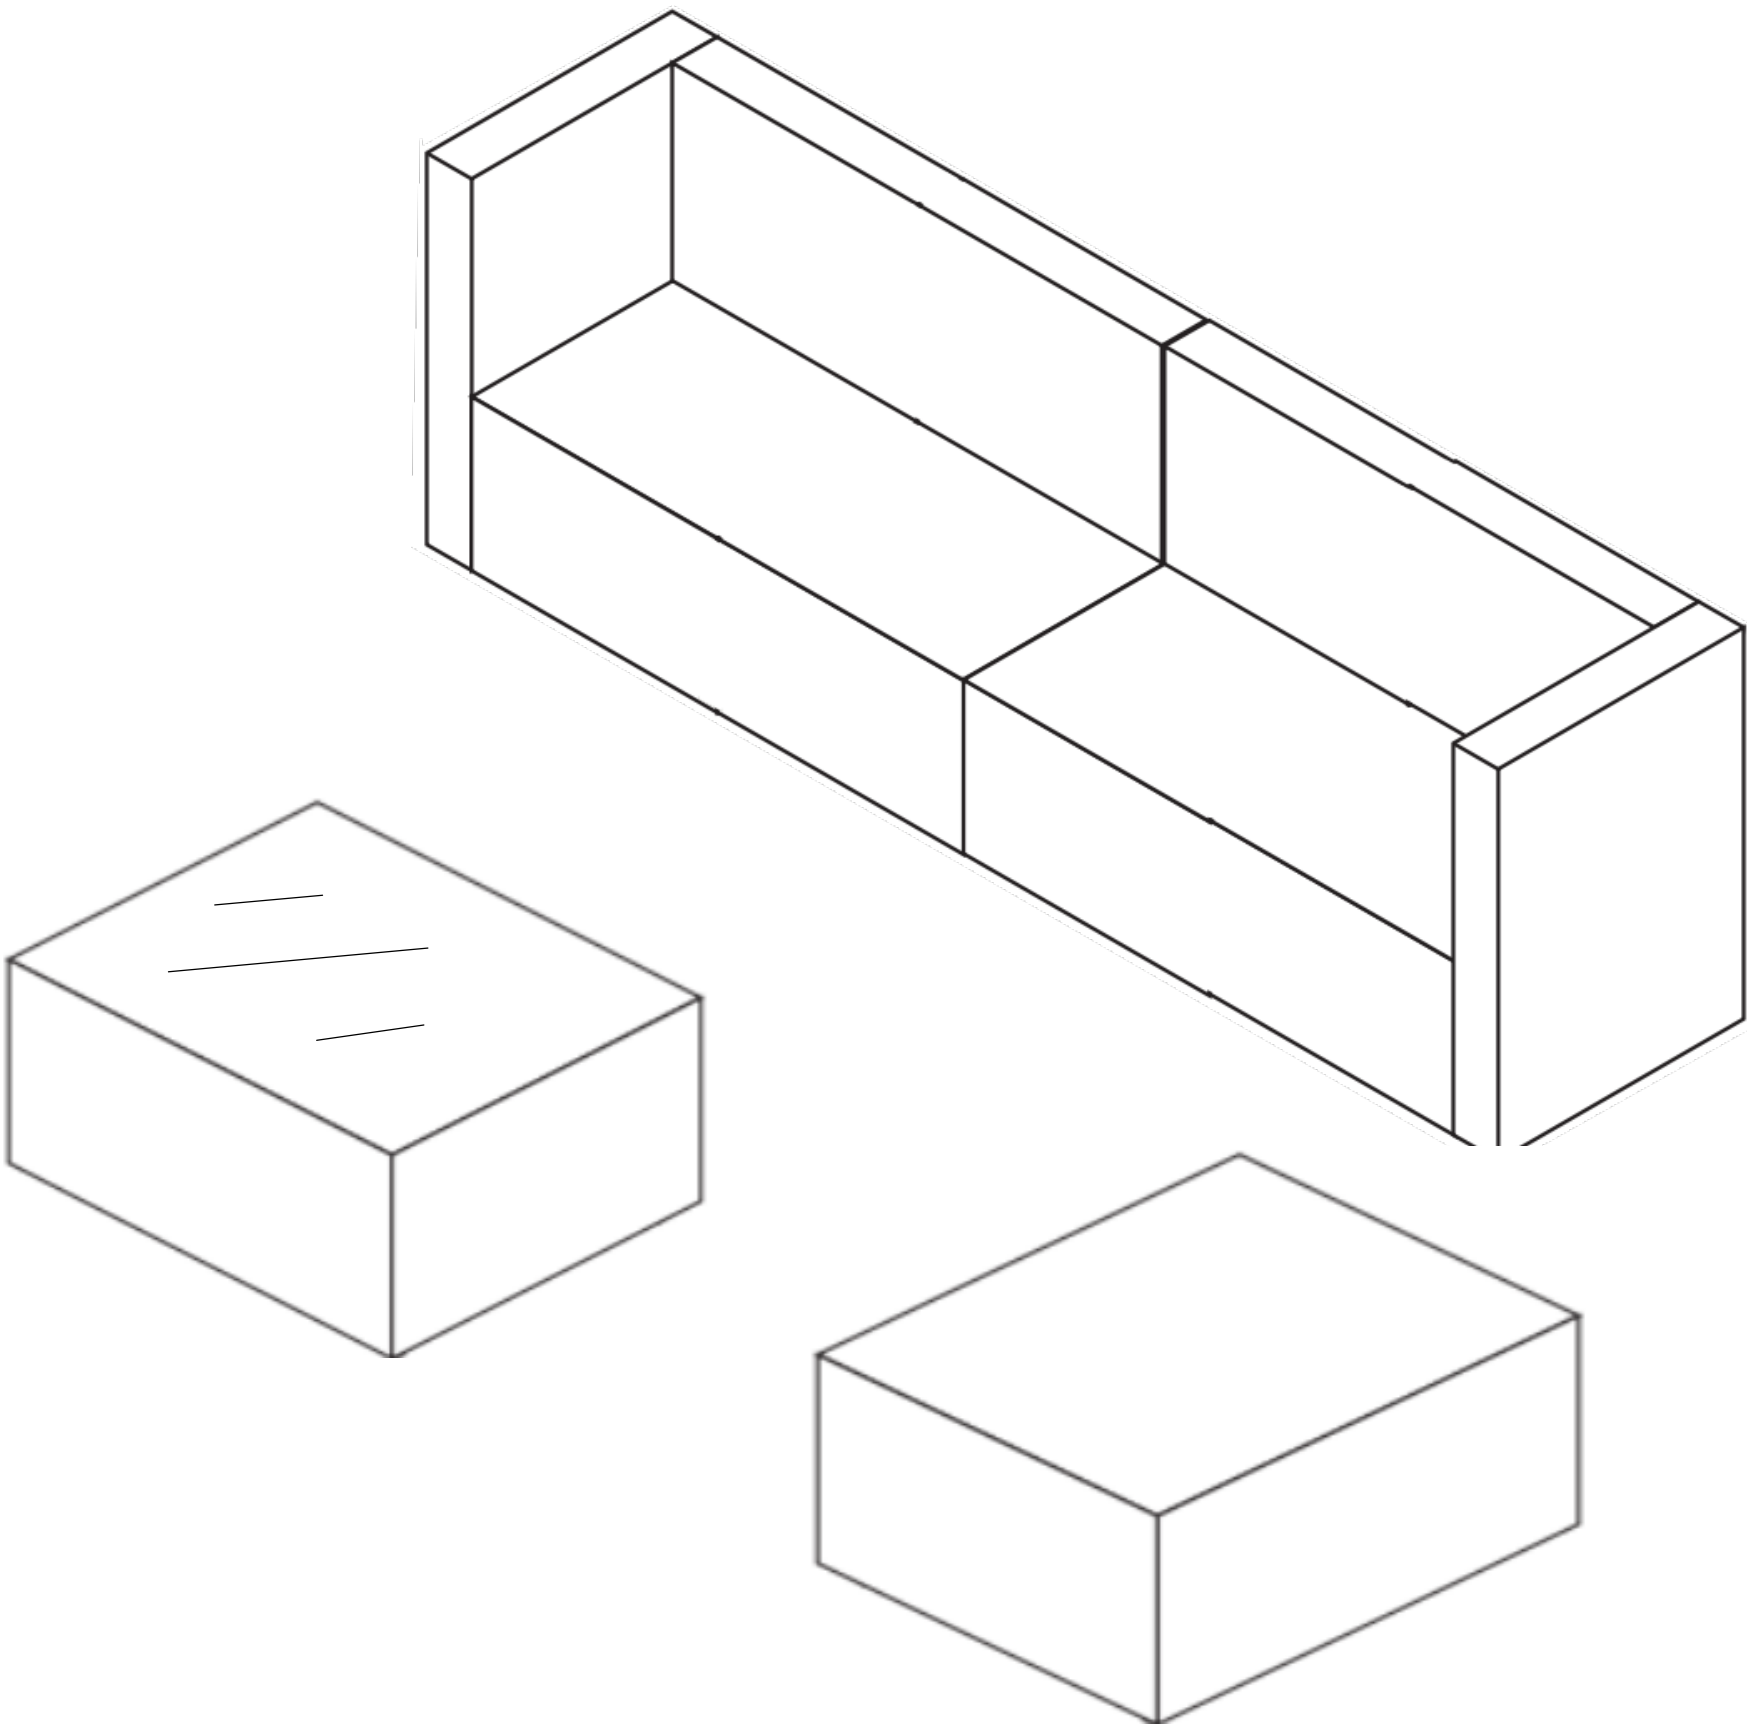
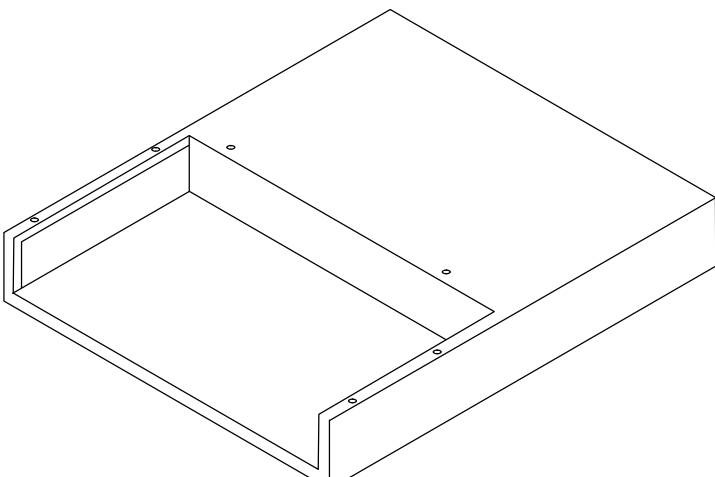
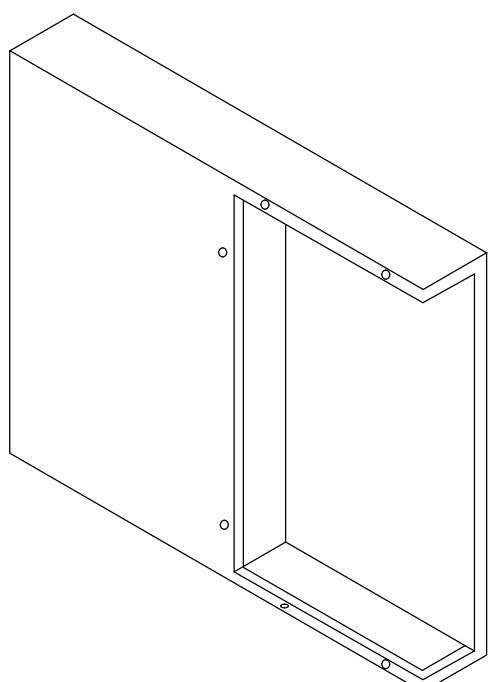
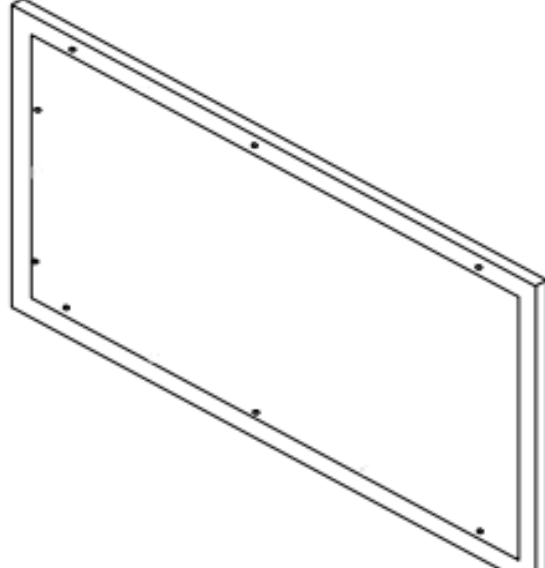
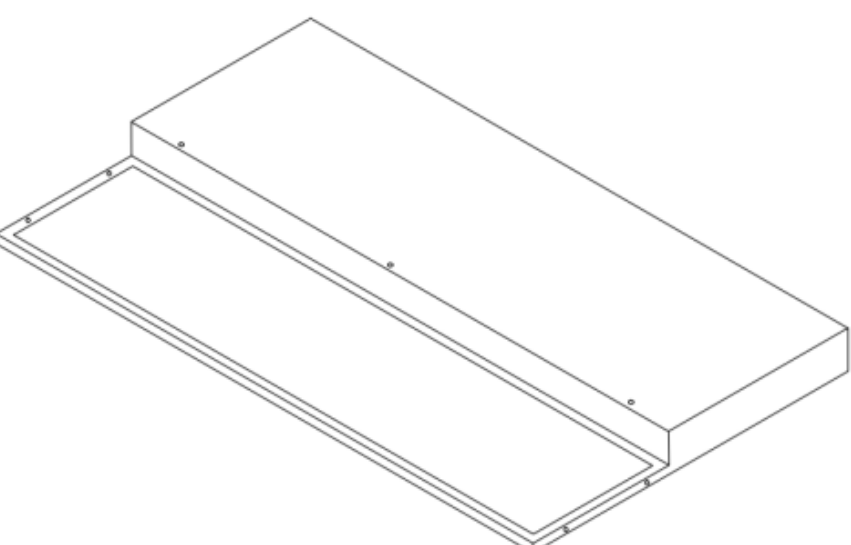
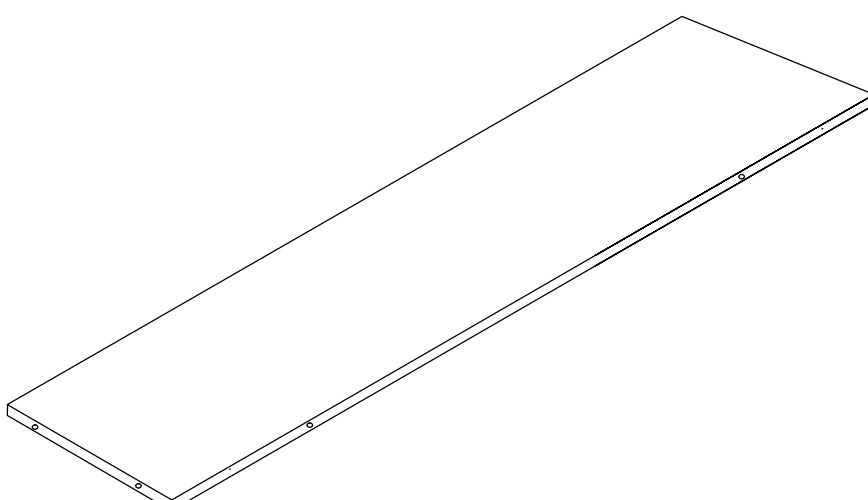
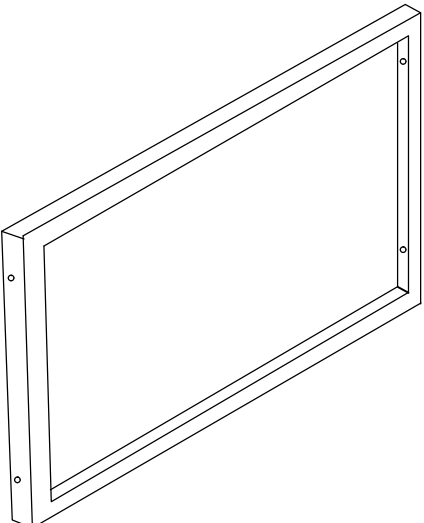
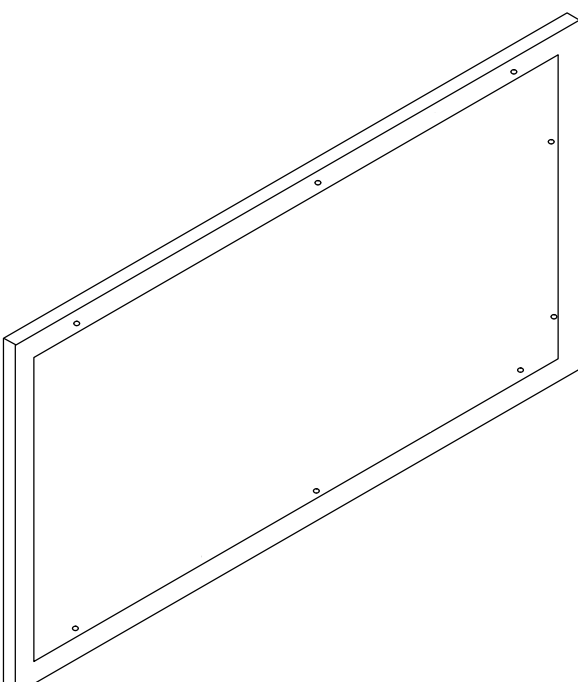
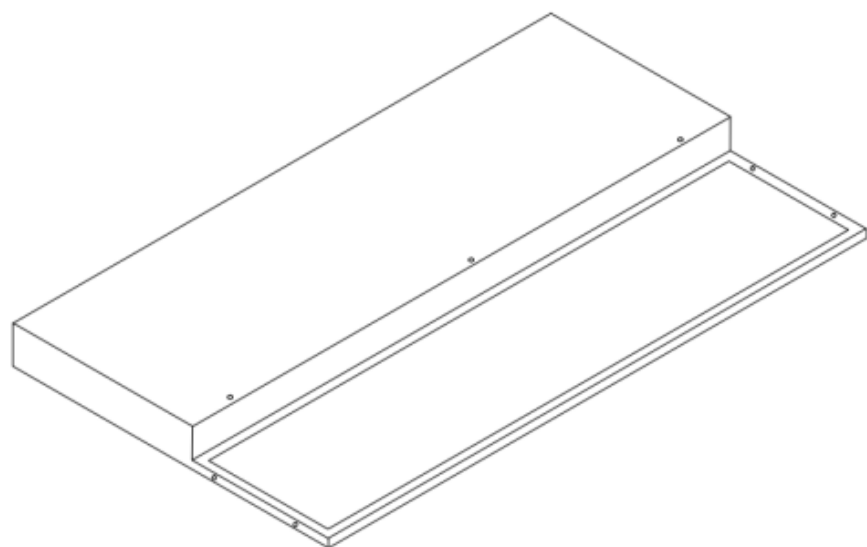
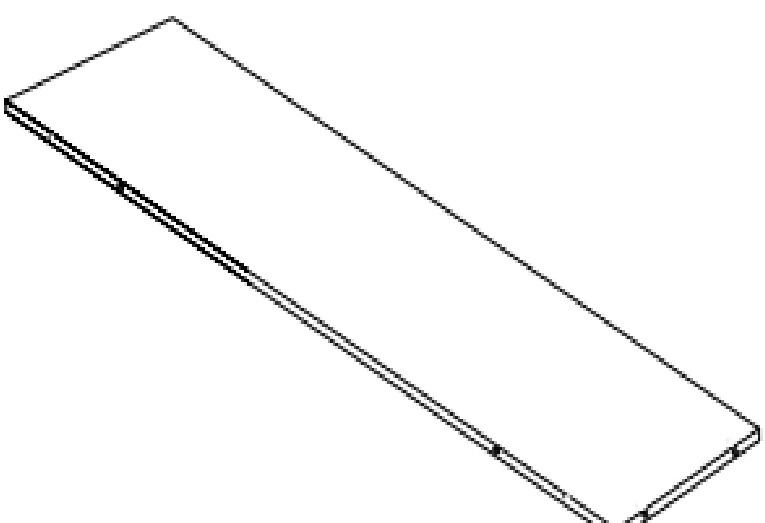
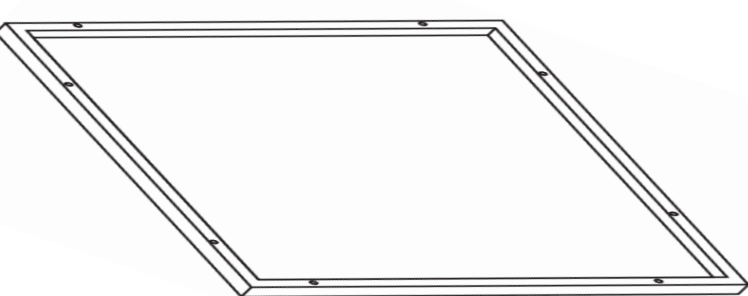
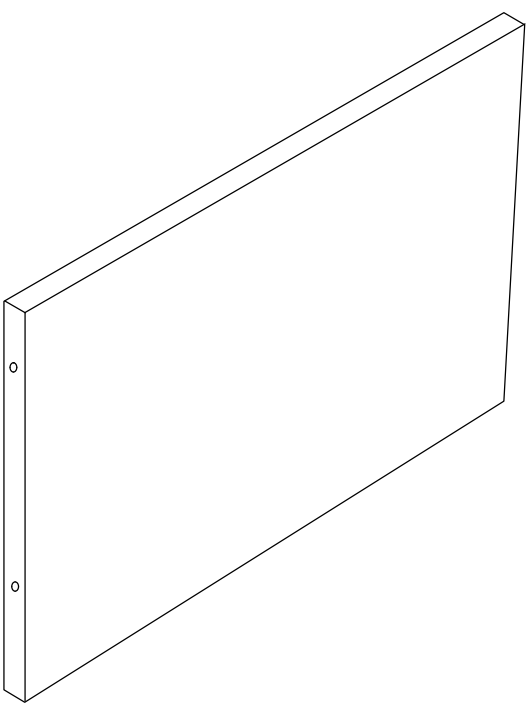
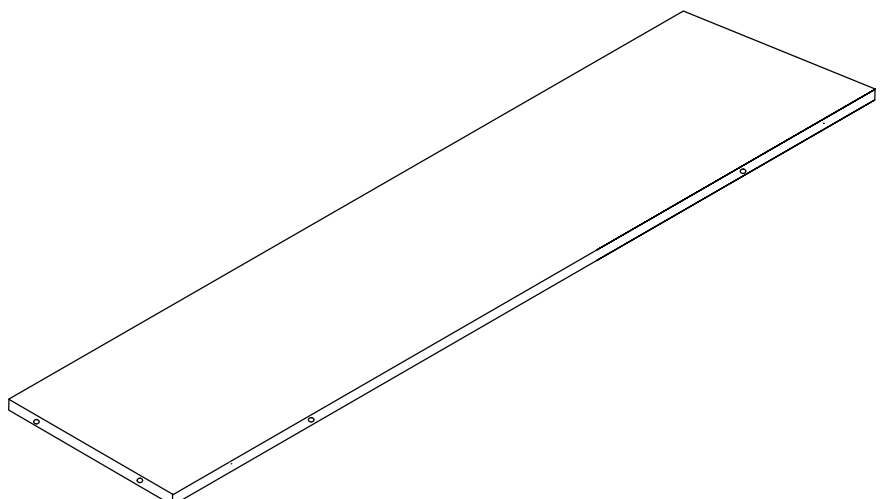


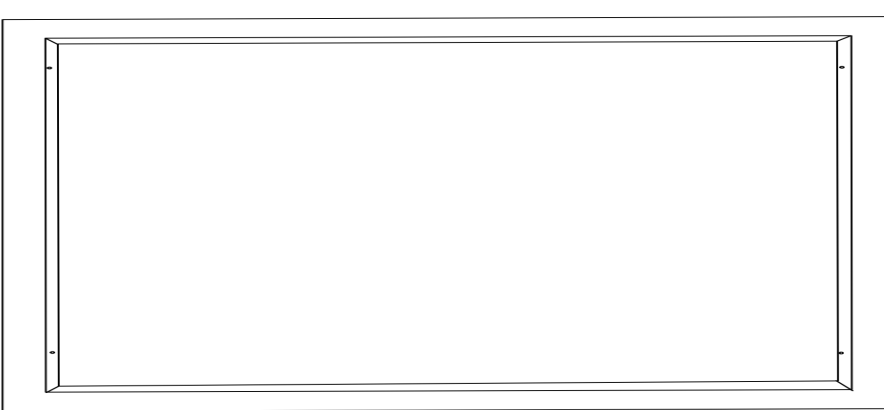

Installation Instruction

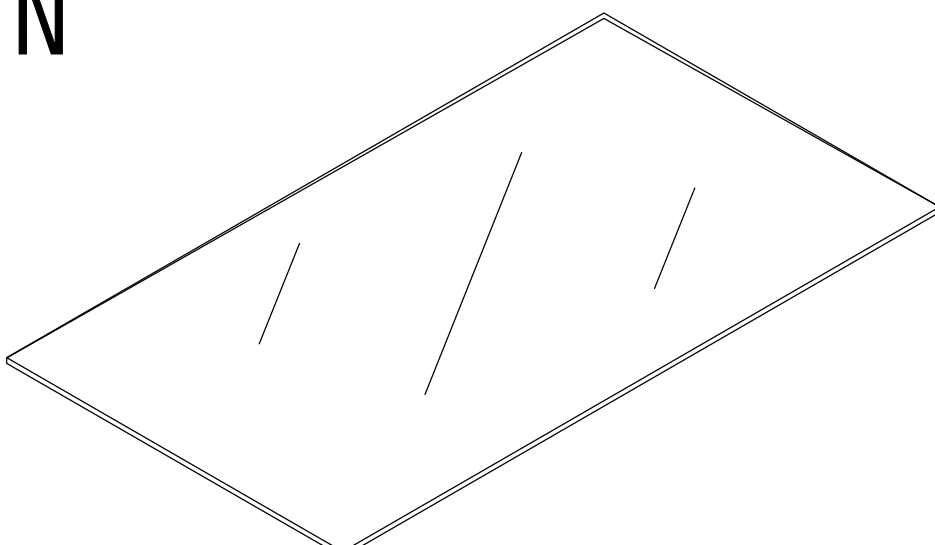


<div data-bbox="60 34 97 92">A</div>  <div data-bbox="625 490 689 562">X1</div>	<div data-bbox="765 34 808 92">B</div>  <div data-bbox="1336 490 1401 562">X1</div>	<div data-bbox="1455 34 1498 92">C</div>  <div data-bbox="2037 490 2102 562">X1</div>
<div data-bbox="64 620 107 677">D</div>  <div data-bbox="625 1067 689 1139">X1</div>	<div data-bbox="765 620 808 677">E</div>  <div data-bbox="1315 1067 1379 1139">X1</div>	<div data-bbox="1455 605 1498 663">F</div>  <div data-bbox="2026 1067 2091 1139">X2</div>
<div data-bbox="53 1196 97 1254">G</div>  <div data-bbox="625 1643 689 1715">X1</div>	<div data-bbox="765 1196 808 1254">H</div>  <div data-bbox="1315 1643 1379 1715">X1</div>	<div data-bbox="1455 1196 1498 1254">I</div>  <div data-bbox="2037 1672 2102 1730">X1</div>
<div data-bbox="53 1773 97 1831">J</div>  <div data-bbox="625 2220 689 2292">X1</div>	<div data-bbox="743 1759 786 1816">K</div>  <div data-bbox="1261 2206 1325 2278">X4</div>	<div data-bbox="1444 1744 1487 1802">L</div>  <div data-bbox="2005 2206 2069 2278">X4</div>
<div data-bbox="53 2350 97 2408">M</div>  <div data-bbox="646 2797 711 2869">X1</div>	<div data-bbox="765 2350 808 2408">N</div>  <div data-bbox="1325 2783 1390 2855">X1</div>	<div data-bbox="1444 2321 1487 2379">X</div> <div data-bbox="1660 2379 1875 2436">  </div> <div data-bbox="1681 2451 1854 2509">M 6X35</div> <div data-bbox="2005 2537 2069 2595">x64</div> <div data-bbox="1444 2638 1487 2696">P</div> <div data-bbox="1649 2739 1972 2811">  </div> <div data-bbox="2037 2826 2102 2884">x1</div>


NOTE : 50% TIGHTEN BEFORE FIXING ALL BOLTS

1

X



M 6X35

2 pcs

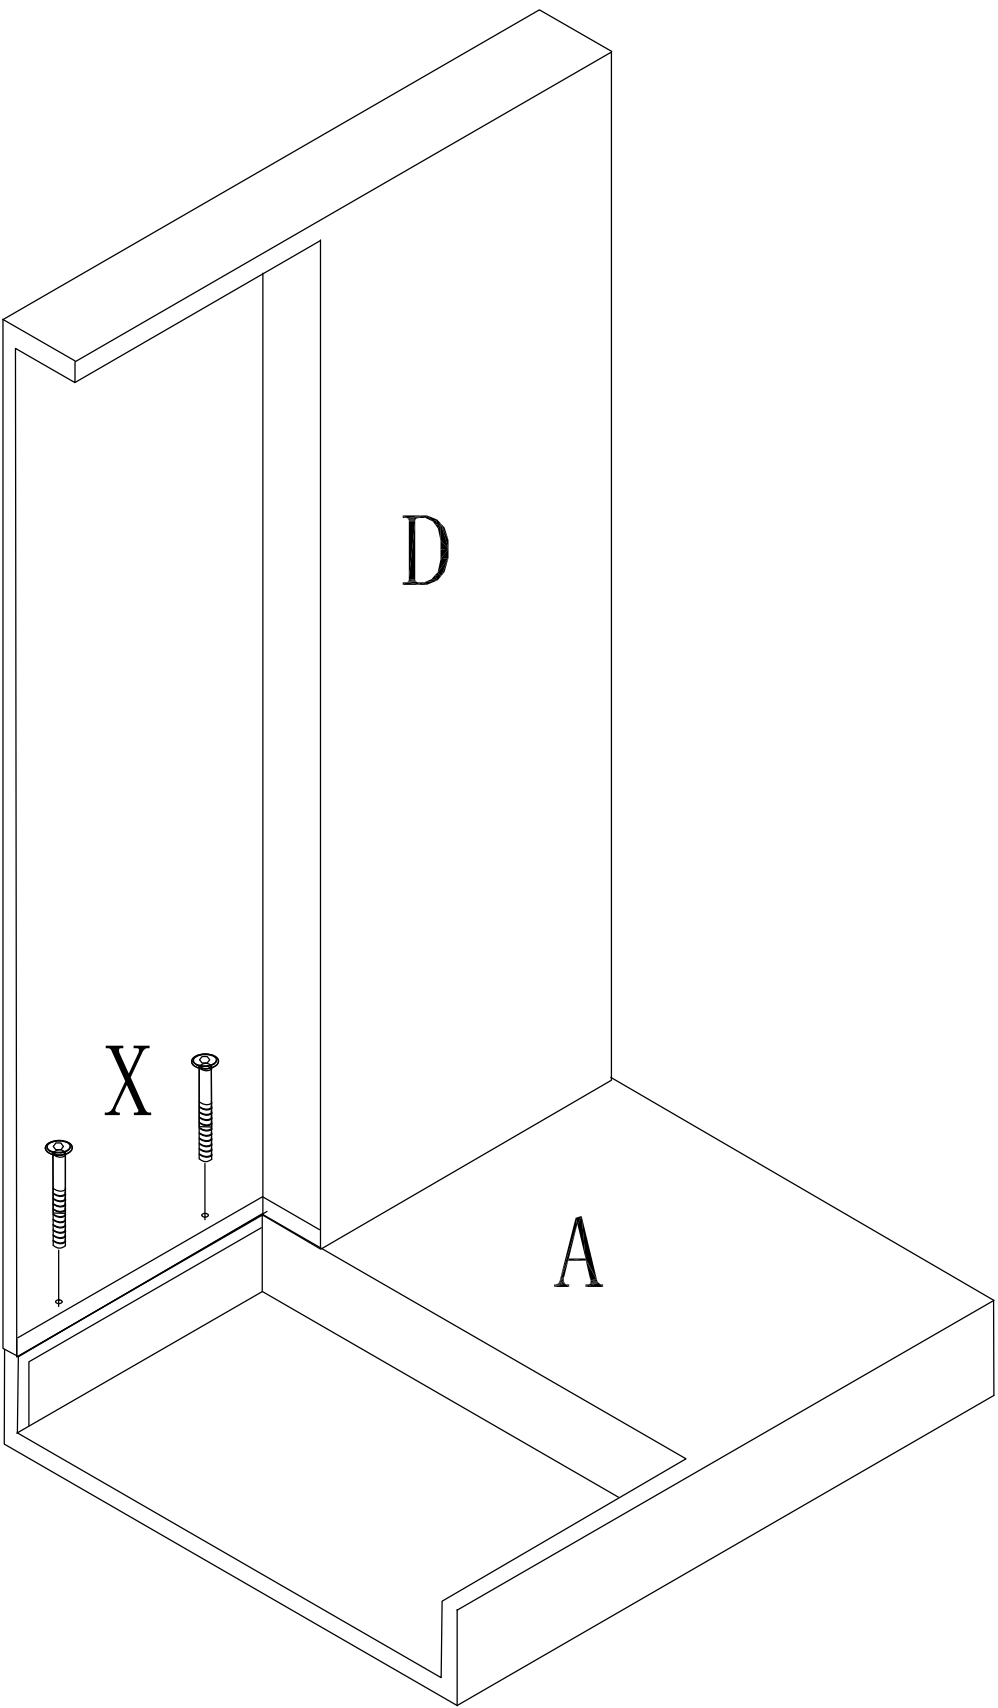


2

X



M 6X35

5 pcs

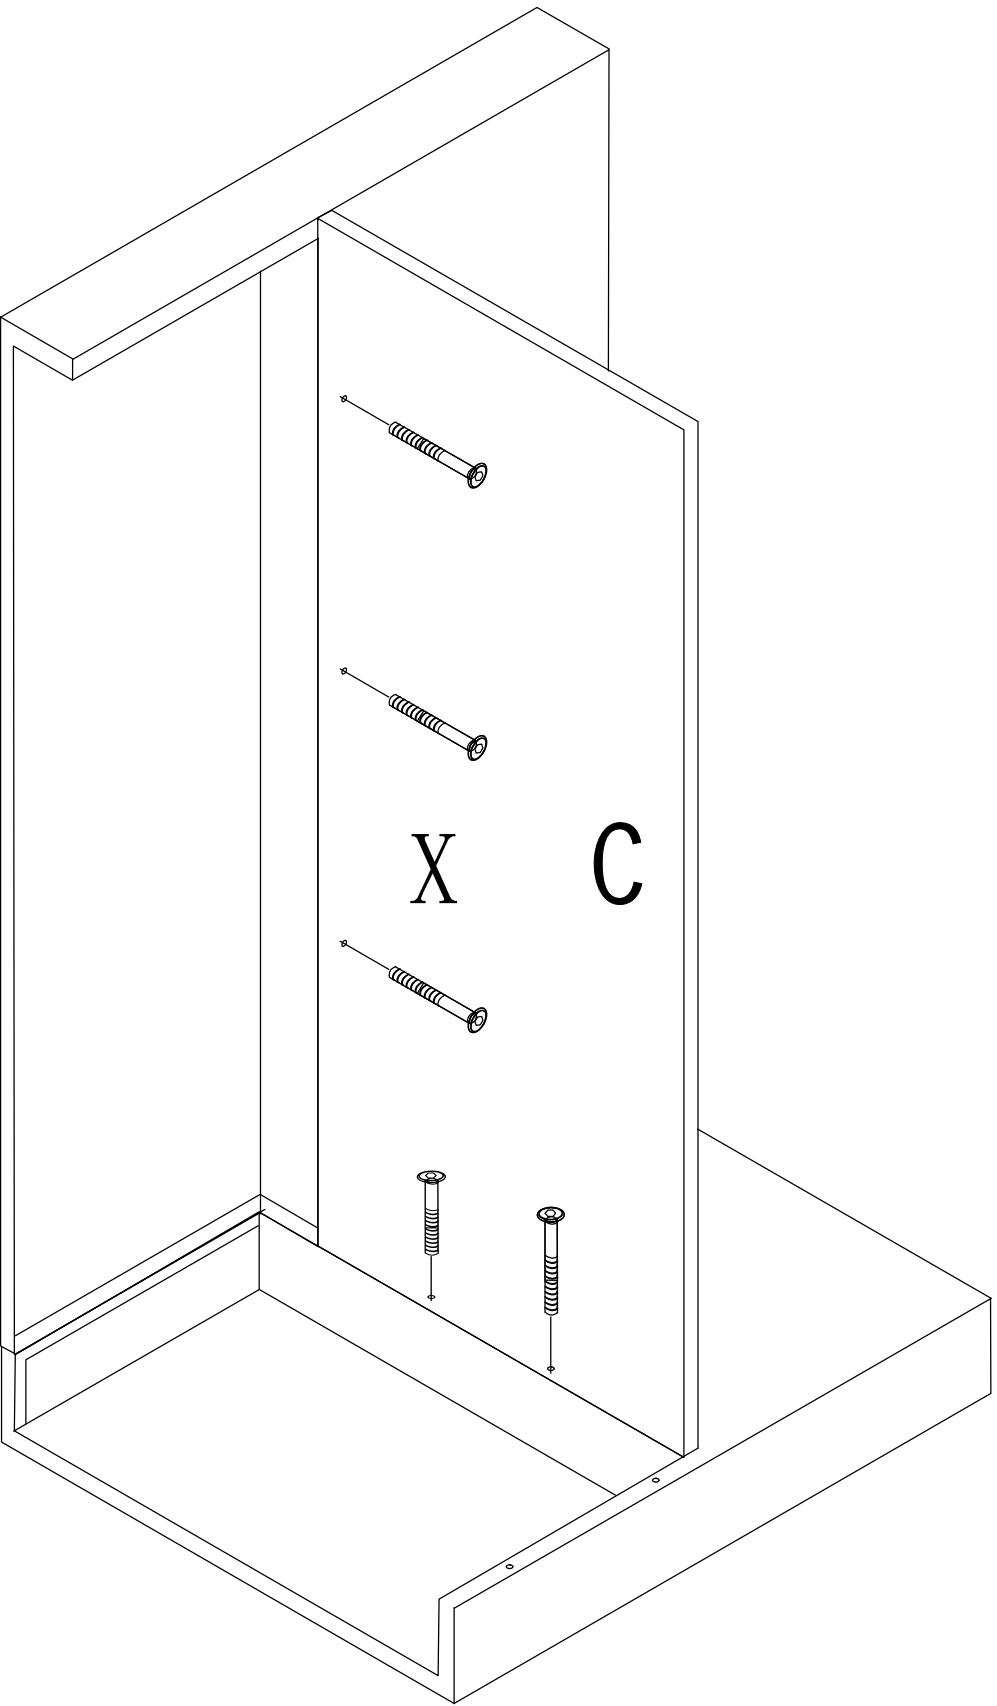


3

X



M 6X35

5 pcs

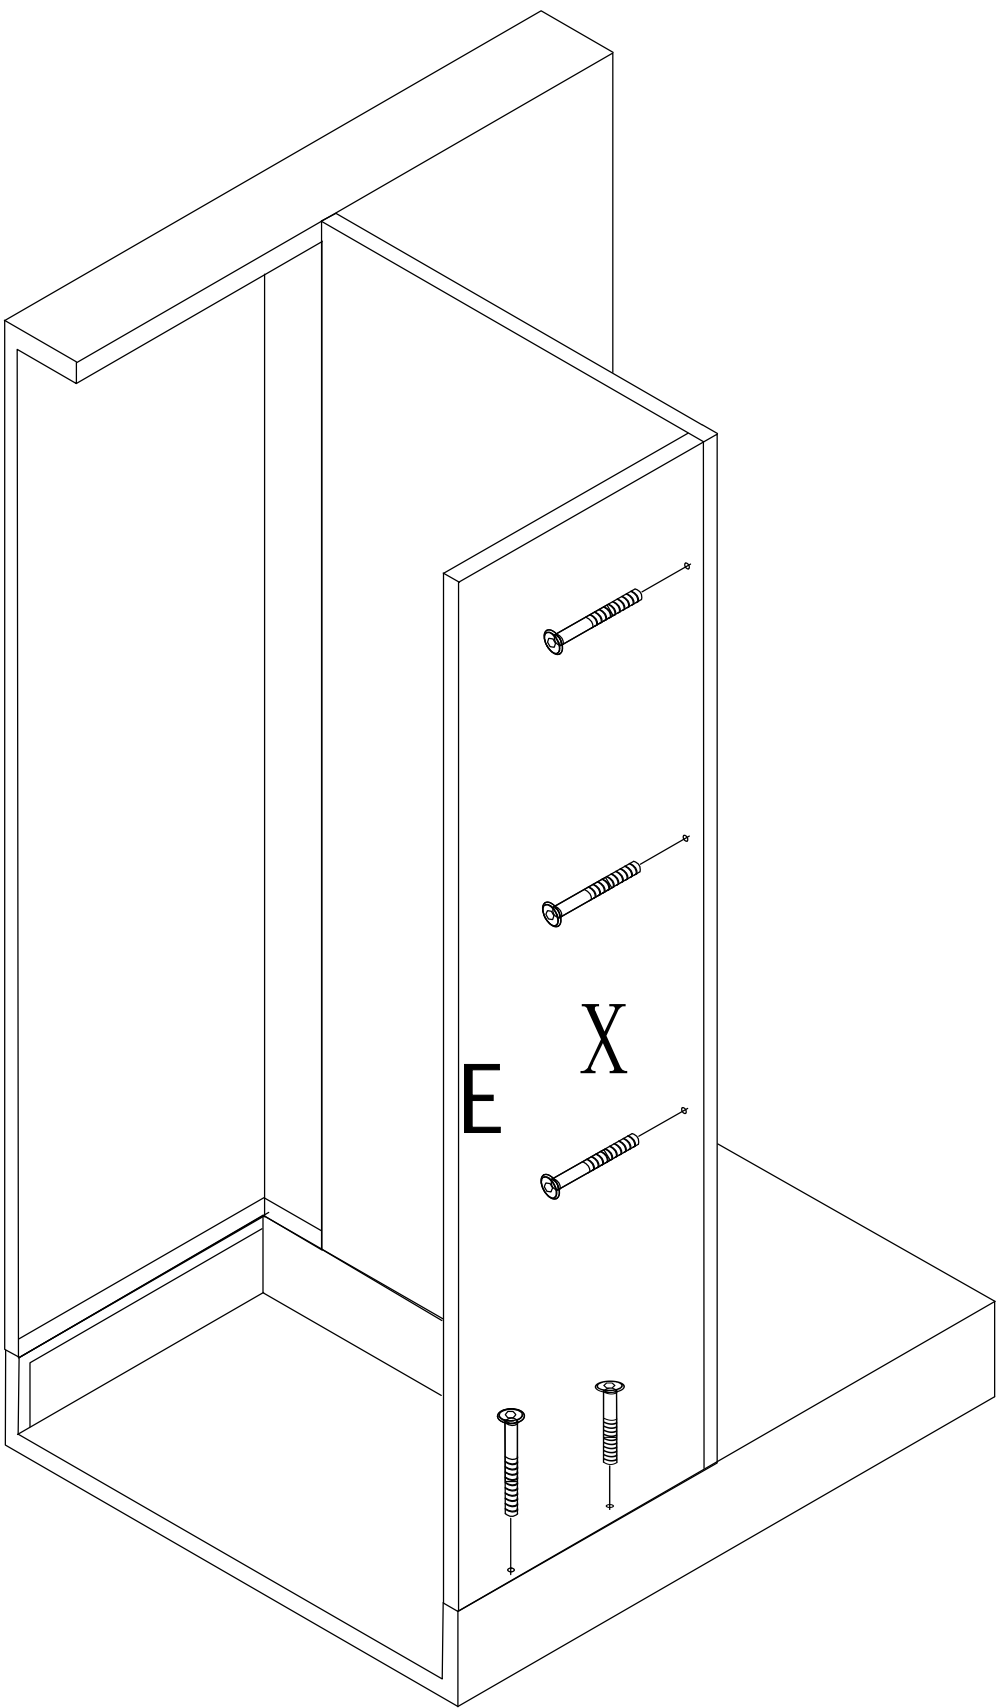


4

X


M 6X35


4 pcs

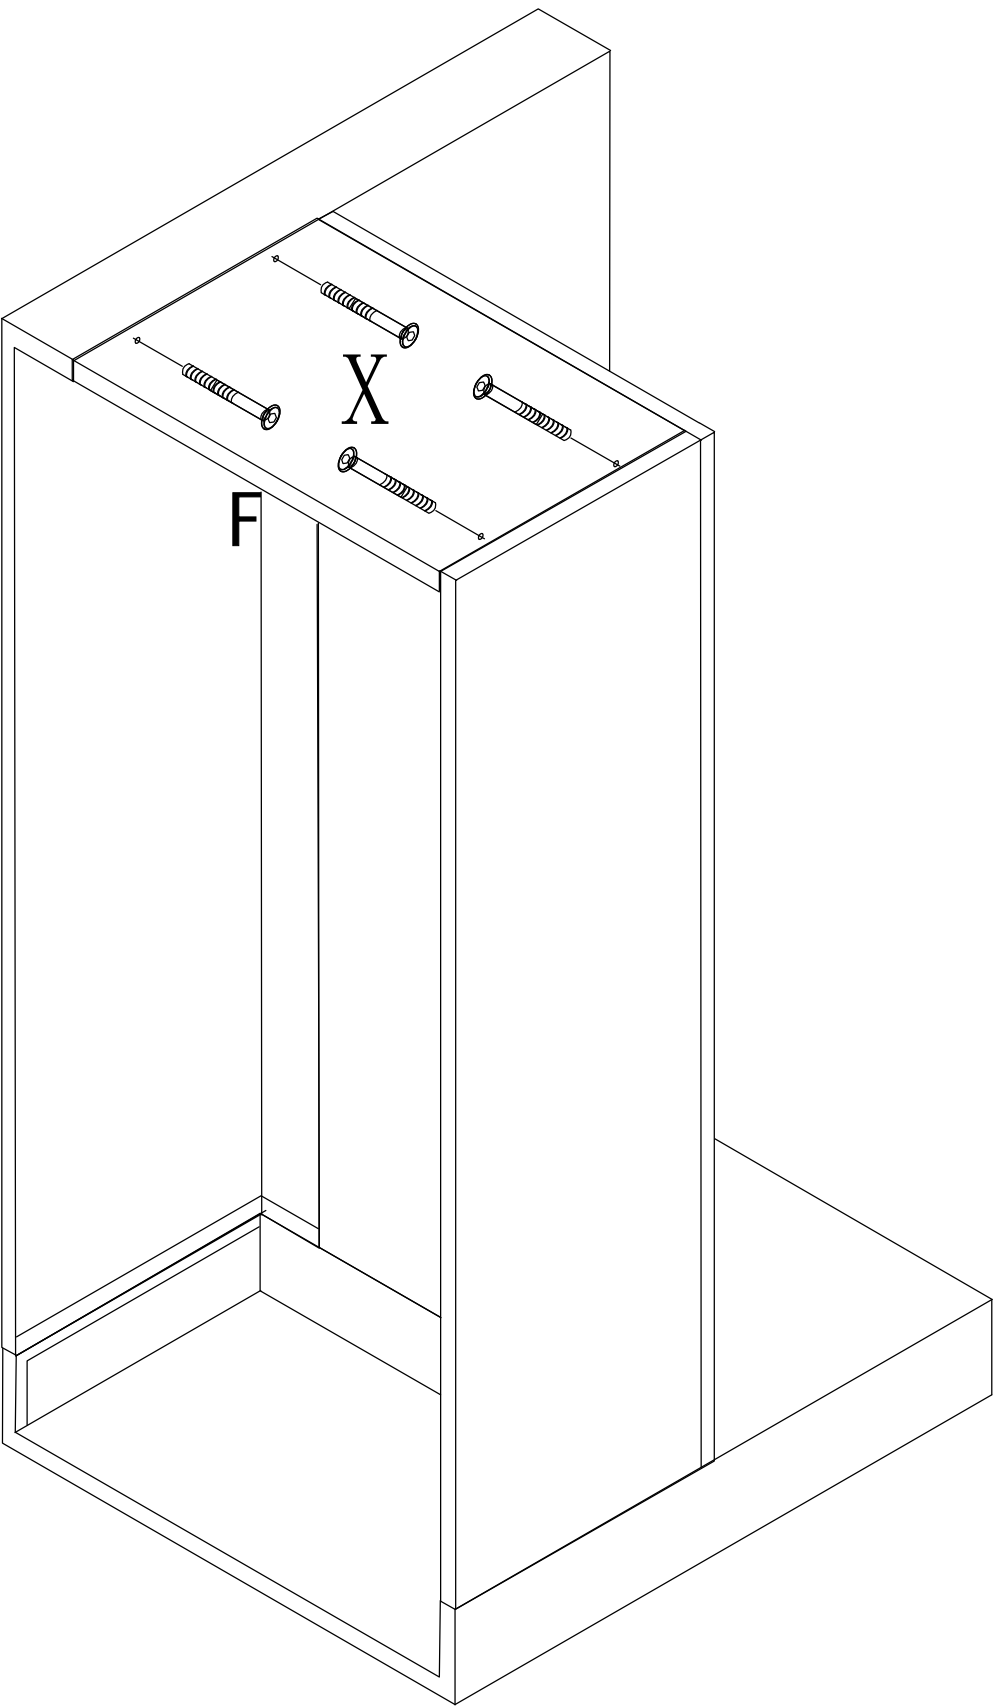

NOTE : 50% TIGHTEN BEFORE FIXING ALL BOLTS


5

X

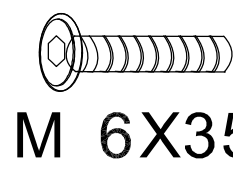


M 6X35

2 pcs

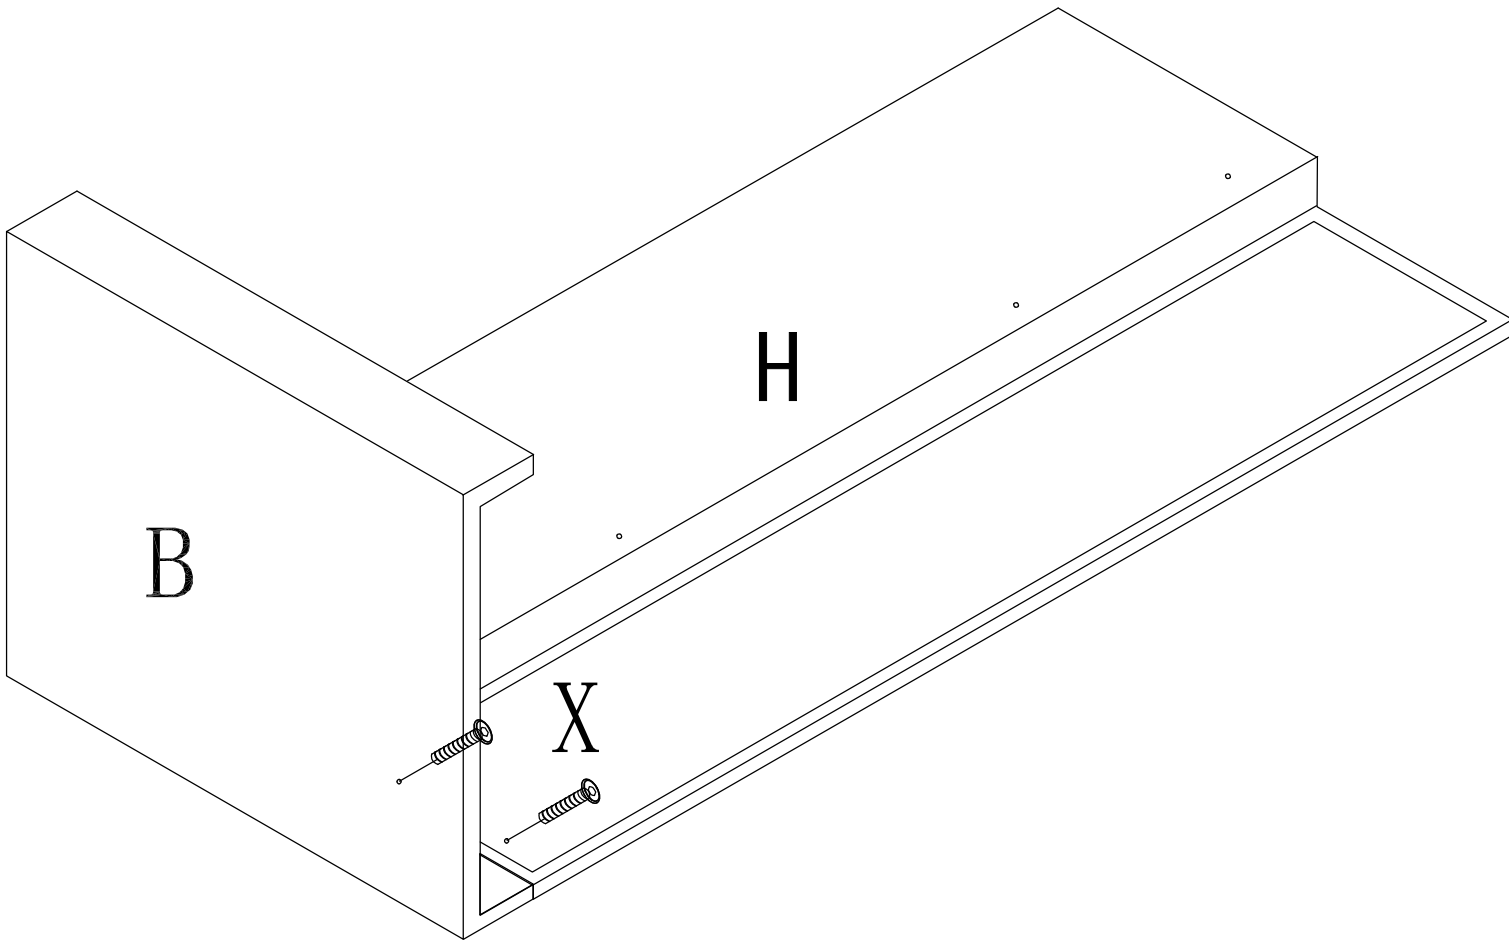


6

X

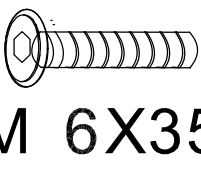


M 6X35

5 pcs

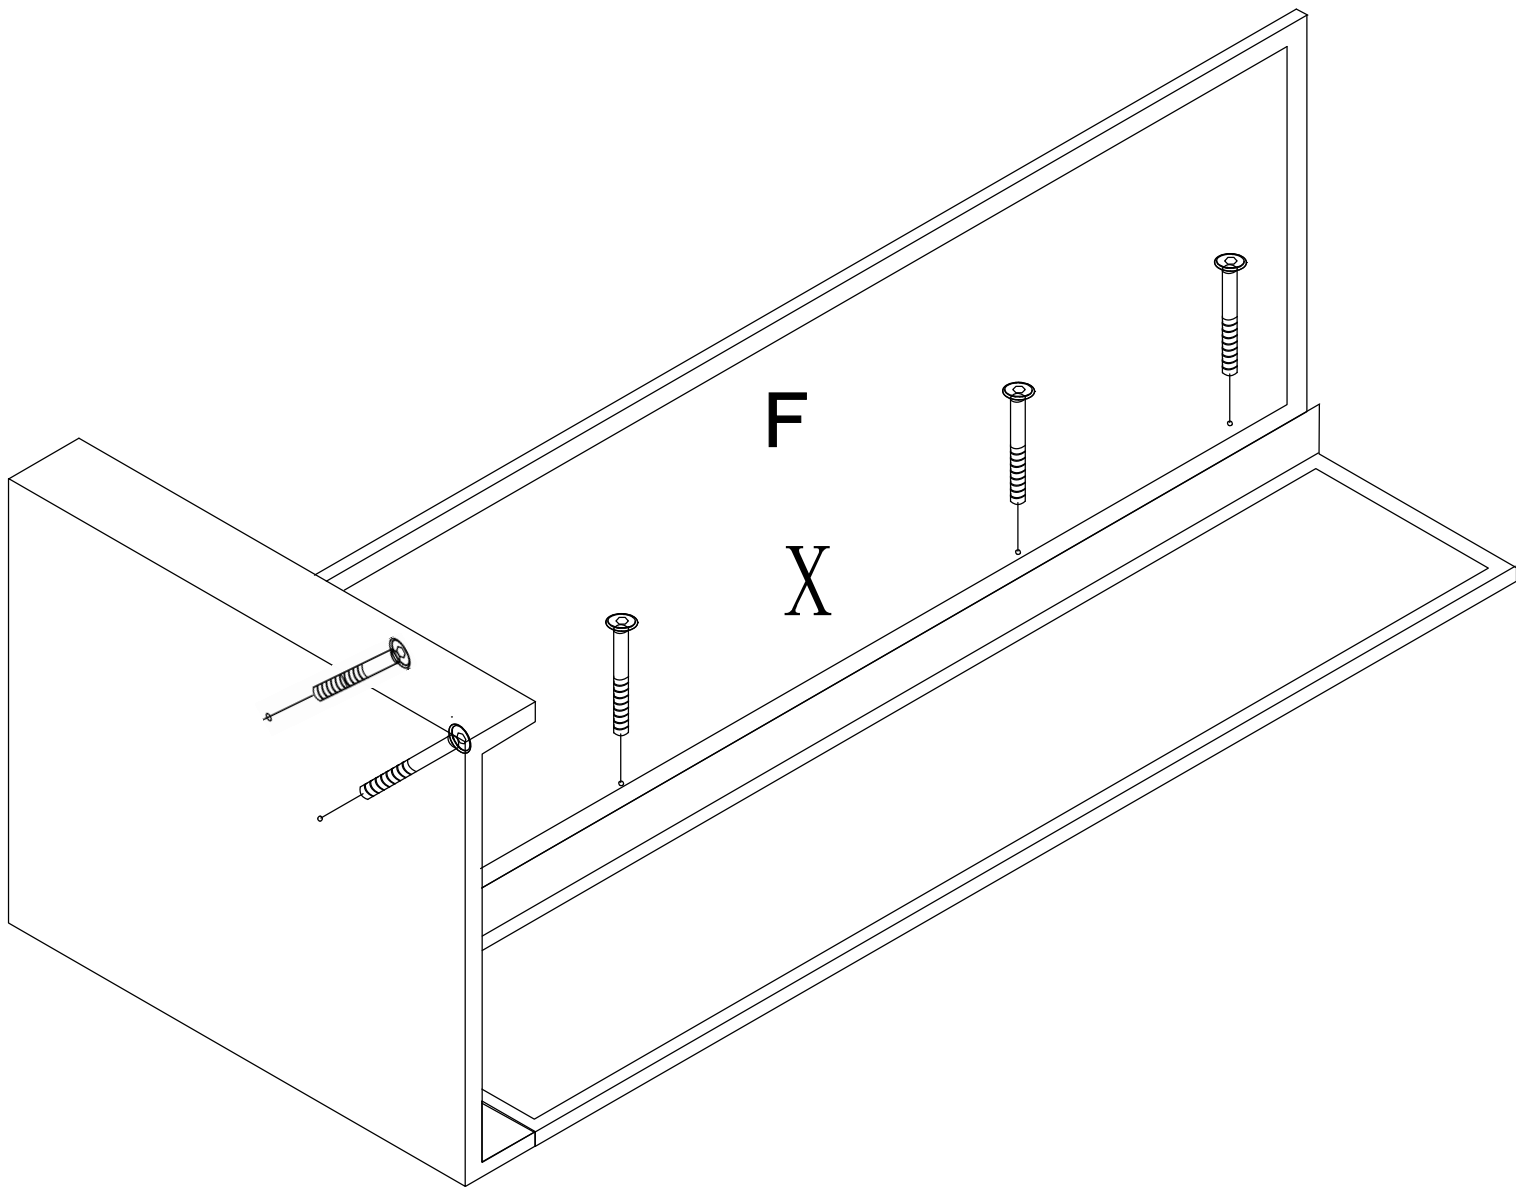


7

X

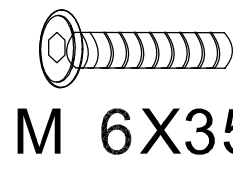


M 6X35

5 pcs

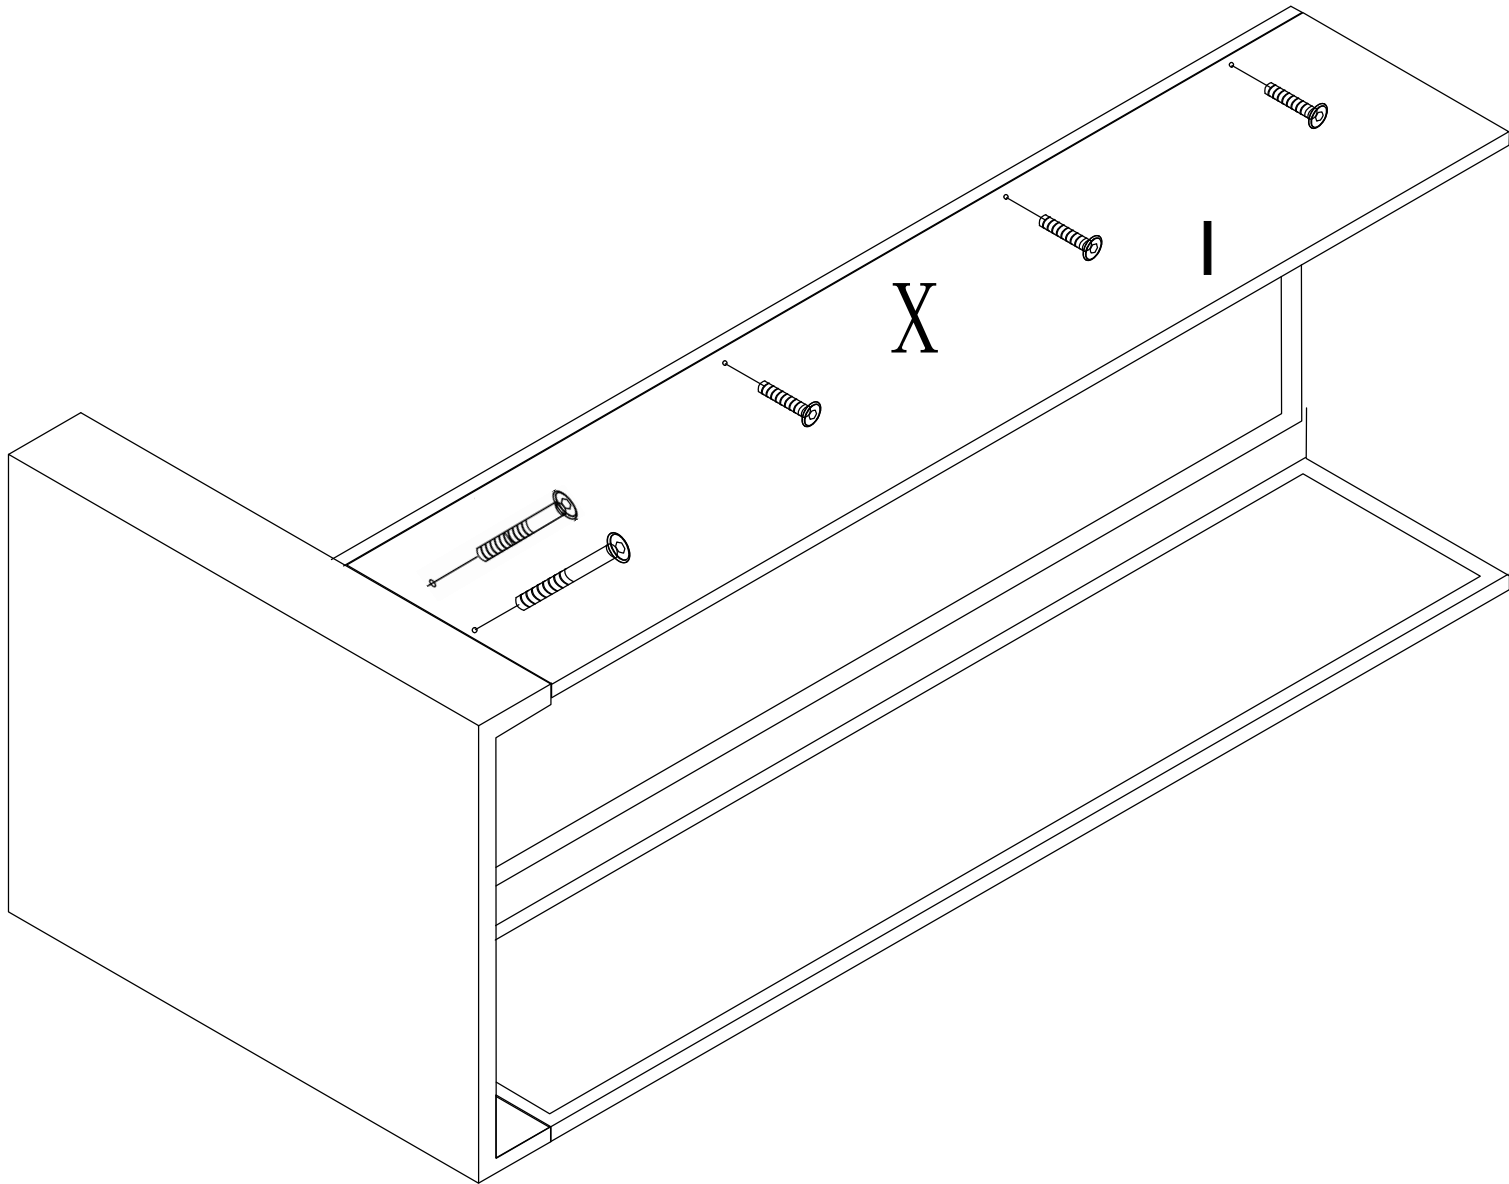


8

X

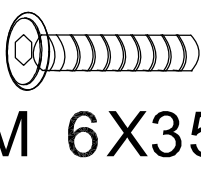

M 6X35


4 pcs

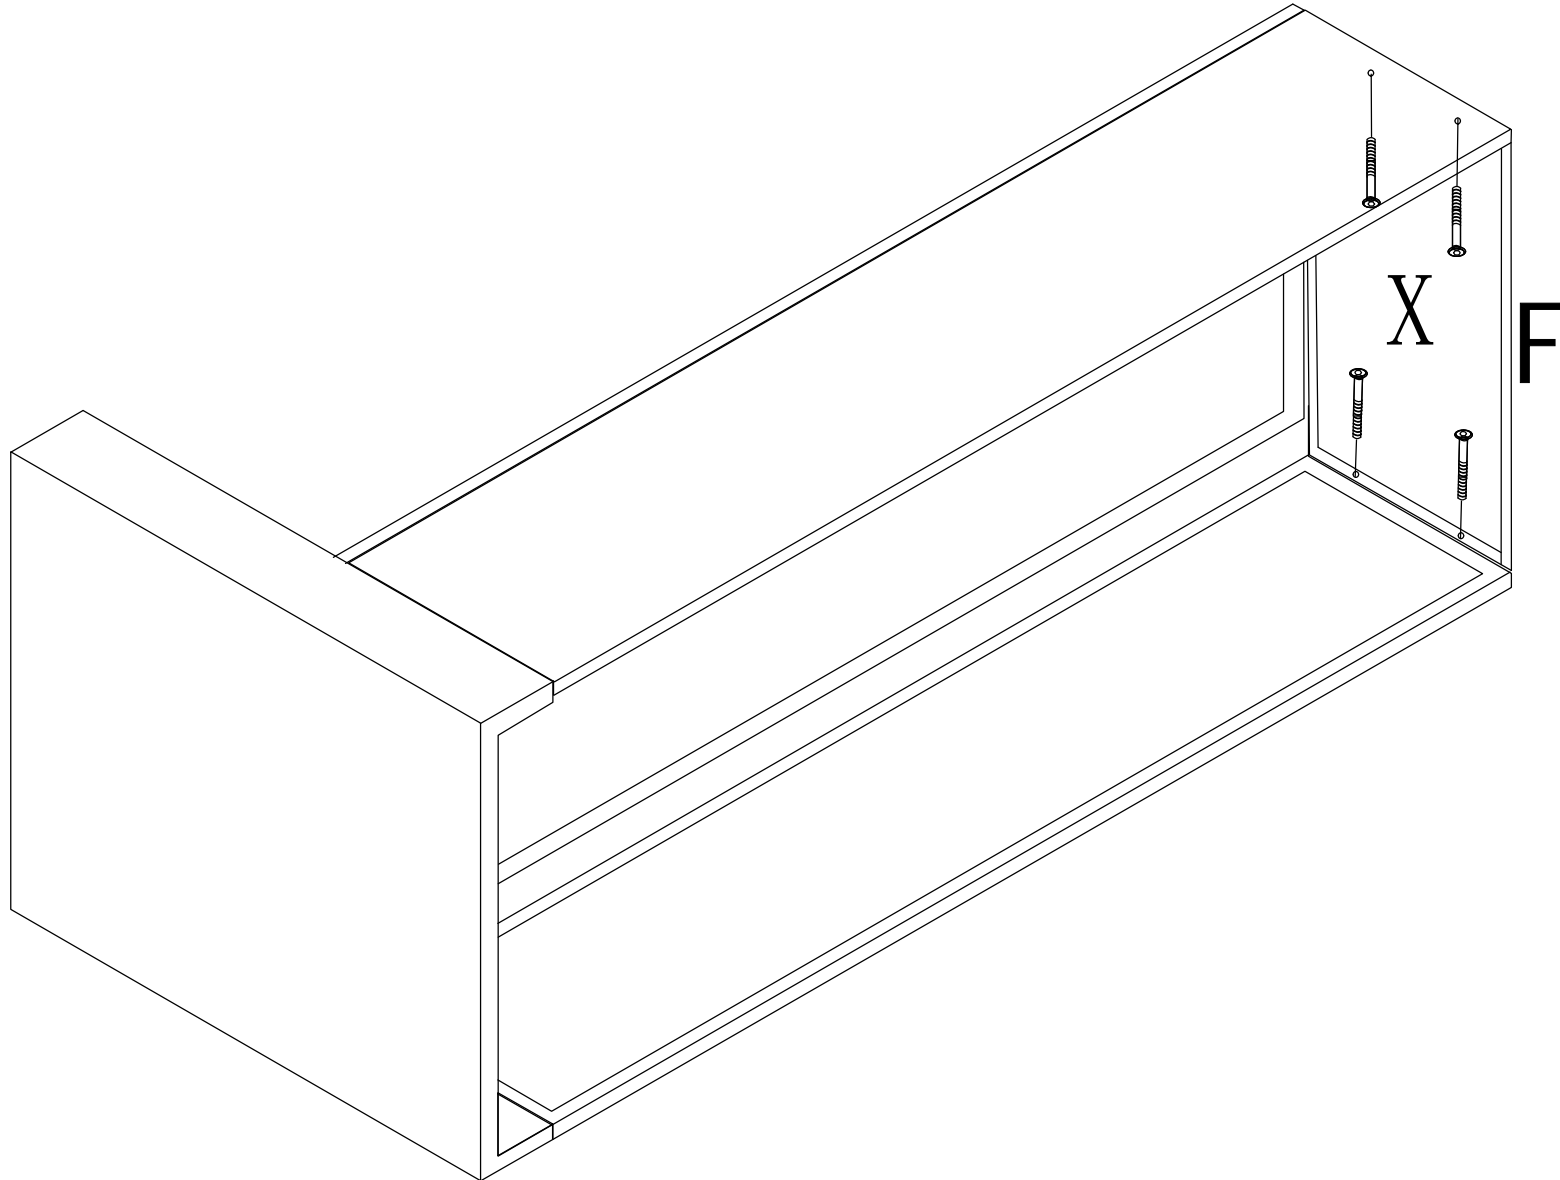

NOTE : 50% TIGHTEN BEFORE FIXING ALL BOLTS

9



X



M 6X35


16pcs

10

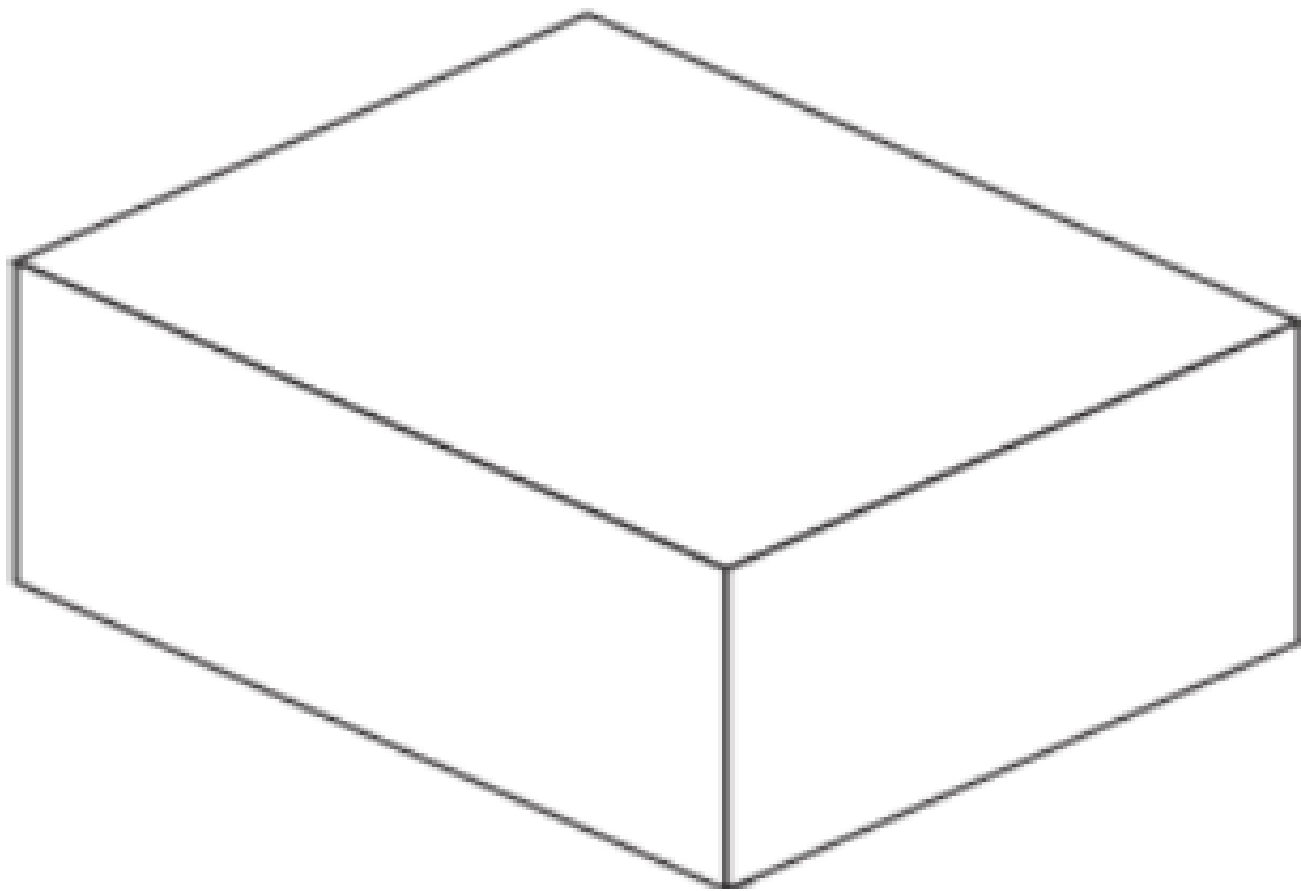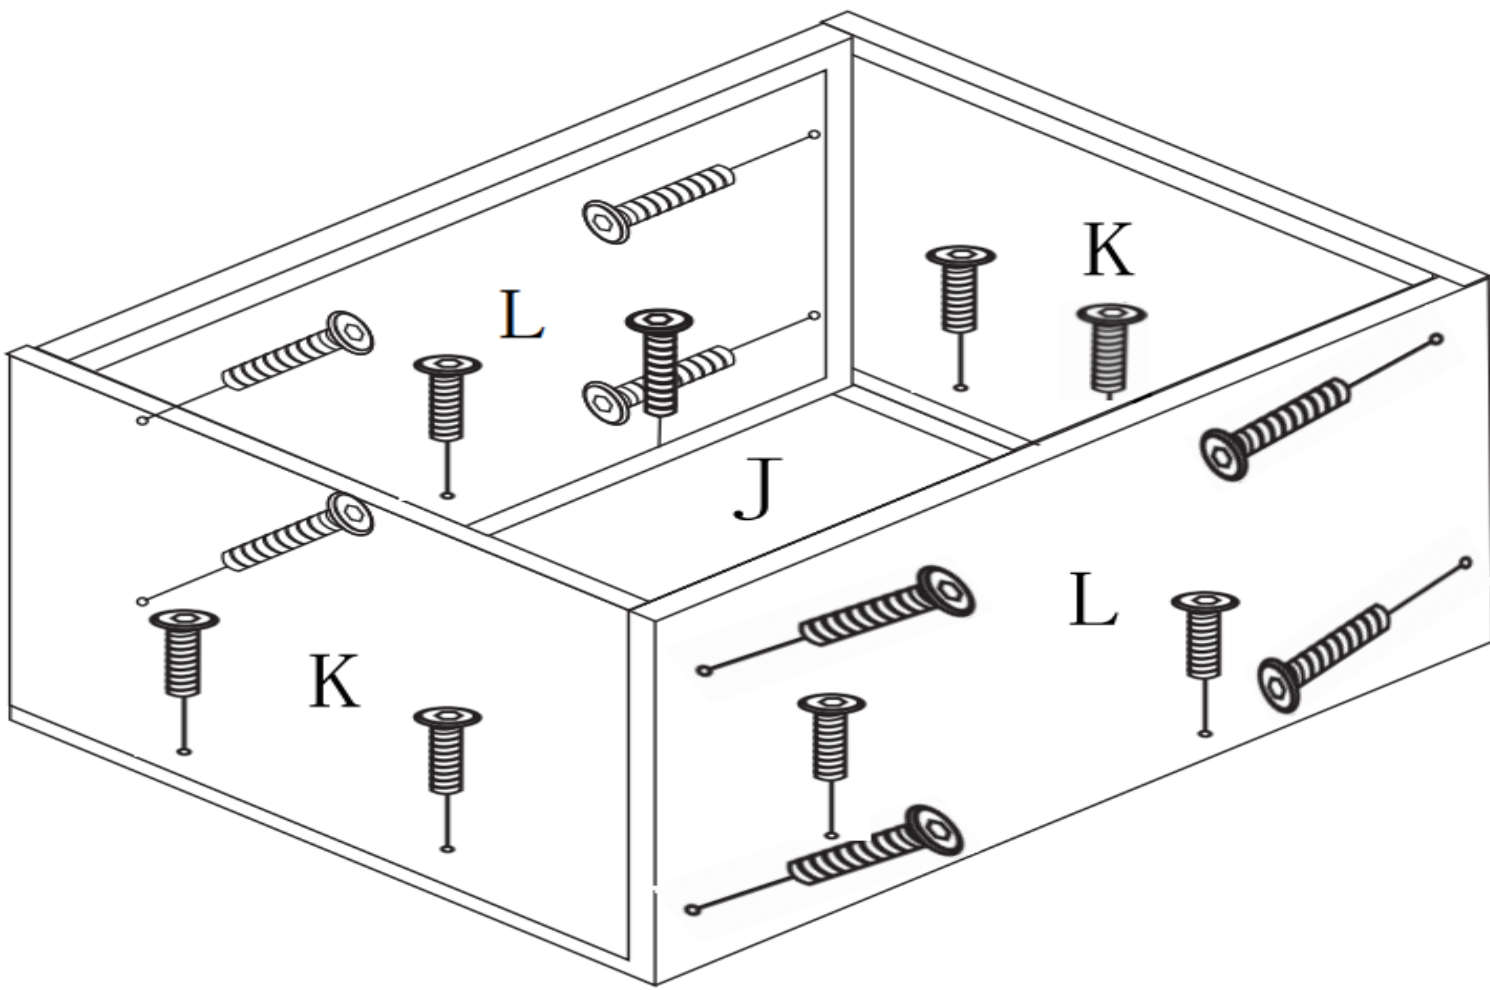

11

X



M 6X35

16pcs

12

